 




Digital Video User's Guide

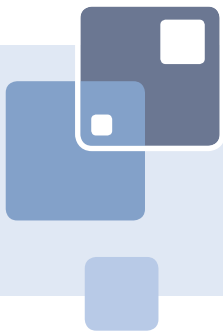

THE **FUTURE**
NOW SHOWING

NOW SHOWING
THE FUTURE



CDE
LIGHTBAND

Welcome

THE NEW WAY TO WATCH



Digital TV is different than anything you have seen before. It isn't cable...it's better. Digital TV offers great channels, many features and many choices. Watch what you want – sports, movies, news, cartoons, drama, comedies – anything you can imagine is there. Watch when you want – with features like Autotune, video on demand and digital video recording. Watch how you want – high quality digital video and sound. So sit back, relax and enjoy the future.

Digital TV User's Guide Copyright © 2005-2012 MS Communications. IPG screen images Copyright © 2010 Minerva Networks, Inc. Used with permission. All rights reserved. Portions Copyright Advanced Digital Broadcasting (ADB), Amino Communications, Ltd., Entone, Inc and Universal Electronics, Inc.. Used with permission. All rights reserved. All other images copyright and/or trademark of their respective owner(s). Dolby and the double-D symbol are registered trademarks of Dolby Laboratories.

This material may not be duplicated, in whole or in part, by any means, without the express written consent of MS Communications, Ringgold GA 30736 USA.

Table of Contents

Remote Control Layout	1
ADB Potenza Remote Control	1
1 Remote Control Basics	2
Turn Your Set Top Box or TV On or Off	2
Change Channels	2
Adjust Volume	2
System Buttons	2
2 How To Use This Book	4
Layout	4
Color-codes & Icons	4
3 Infobar	5
Infobar Layout	5
Introducing The Infobar	6
Go To The Infobar	6
Using the Infobar	7
4 Menubar	8
Introducing the Menubar	8
Go To the Menubar	8
Understanding the Menubar	8
5 Guide	10
Guide Layout	10
Introducing Guide	11
Go To Guide	11
Getting Around Guide	11
Favorites List in Guide	11
HDTV Programming	11
6 Guide - Alerts & Recording	12
Introducing Guide & Recording	12
Setting a Reminder, Autotune or Recording	12
Editing a Recording	14
Setting a Series Recording	15
Editing a Series Recording	16
Skipping an Episode	17
Cancelling an Autotune, Reminder, Recording or Series Recording	18
Additional Information on Cancelling Events	18

Table of Contents

7 Recording	19
Recordings	19
Quick Recording	19
General Guidelines About Recordings	19
Pausing Live TV (PLT)	19
Controlling Live TV	20
DVR Playback Controller	20
Schedule Event	21
Accessing the Schedule Event Screen	21
Configuring the Schedule Event Screen	21
Record By Search	22
8 DVR	23
Introducing DVR	23
Go To DVR	23
The DVR Menu Quick Reference	23
Recorded Programs	23
Recorded Programs: Watching a Recorded Program	24
Recorded Programs: Sorting Recordings	25
Recorded Programs: Locking or Unlocking a Recording	25
Recorded Programs: Deleting a Recording	26
Recorded Programs: Stopping a Program Currently Recording	26
To Record	26
To Record: Sort Future Recordings	27
To Record: Cancelling a Future Scheduled Recording	27
Schedule Priority	27
Schedule Priority: Changing Schedule Priority	27
Schedule Event	28
Schedule Event: Editing a Scheduled Event	28
Record History	28
Record History: Reviewing Record History	28
Whole Home DVR (Coming Soon)	29
Set a Recording	29
Non-DVR Set Top Box Recordings List	29
Watching from Room to Room	30
9 Pay Per View	31
Introducing Pay Per View (PPV)	31
Go To Pay Per View	31
Buying Pay Per View	31

Table of Contents

10 Rentals	33
Introducing Rentals & VOD (Video on Demand)	33
Go To Rentals	33
Browsing Rentals	33
Renting a VOD Rental	34
Watching Your VOD Rental	35
Controlling Rental Playback	35
The Slider	36
11 My Library	37
Introducing My Library	37
The My Library Menu	37
Go To My Library	37
Go To Rented Videos	37
Watching a Rental Video	38
Introducing PPV Events	38
Go To PPV, Pay Per Block, and Sports Package	38
Introducing Reminders	39
Go To Reminders	39
Cancel a Reminder or Autotune	39
Introducing Messages	40
Go To Messages	40
Reading a Message	40
12 Controls	41
Introducing Controls	41
Turning Controls On	41
Turning Controls Off	41
Turning Controls On Again	42
13 Settings	43
Introducing Settings	43
Go To Settings	43
Activating Parental Control	43
Selecting Parental Control Settings.	43
Activating the Parental Control Settings	44
Working With Additional Preferences	44
Working With Settings/Users	46
Adding a User Account	47
Editing a User Account	49

Table of Contents

14 Sign Out / Sign In	51
Sign Out / Sign In	51
Go To Sign Out / Sign In	51
15 Favorites	52
Introducing Favorites	52
Go To Favorites	52
Choosing a Favorites List	52
Creating or Editing a Favorites List	53
Delete a Favorites List	53
16 Search	54
Introducing Search	54
Go To Search	54
Search For A Program	54
Set Top Box	56
Amino 125 Set Top Box	56
ADB 2500 Set Top Box	57
ADB 5721 WNX Set Top Box	58
ADB 5810 Set Top Box	59
Movie Ratings	60
MPAA (Motion Picture Association of America) Ratings System	60
TV Ratings	61
TV Parental Guidelines Ratings System	61
Program Ratings	61
Content Ratings	61

Remote Control Layout

ADB Potenza Remote Control

Device Selection

Send commands to TV, audio, DVD, auxiliary device or set top box

RCU SETUP

Setup remote

DVR LIST

Quick Access to Recorded Programs List

MENU

Displays Menubar

Arrow Keys

Move the highlight in menu screens

GUIDE

Displays Guide

DAY - / DAY +

Jumps Guide 12 hours ahead or back

Function Buttons

For future use

VOL + / -

Adjust volume

MUTE

Toggle audio on or off

Number Pad

Enter a channel number or PIN

WWW

For future use

INPUT

Access Devices

PHONE

For future use

POWER

Turn a selected device on or off

Playback Controls

Control playback of DVD, DVR or VOD

RECORD

Begin DVR recording

INFO

Display the Infobar

OK

Enter a choice you have made

EXIT

Close any screen and return to TV

PG + / -

Jump Guide 1 page up or down

CH +/-

Change the channel

VOD

Display Rentals

LAST

Return to previous channel

CC

Toggles closed captions on or off

SAP

Toggles Secondary Audio Program on or off



1 Remote Control Basics

Turn Your Set Top Box or TV On or Off

The device selection buttons tell your remote whether you want to control your set top box or your television.

To turn your TV On/Off, press the **TV** button then the **POWER** button.

To turn your set top box on or off, press the **STB** button and then the **POWER** button.

Note: It is not necessary to turn your set top box off.

Note: Your remote control must have the remote code programmed in before it can send the correct signals for your TV. If the list of TV brand codes was not included in your installation pack, please contact customer service.

If pressing **POWER** turned the wrong device on or off, press the **POWER** button again, press the appropriate device selection button (**TV**, **AUD**, **DVD**, **AUX** or **STB**) and press **POWER** once more.

Change Channels

The **CH+/-** button will change channels up or down one at a time.

The **Number Pad** can be used to directly enter a channel number.

GUIDE will display Guide so you can find a program you like. If the program is on now, you tune to the channel showing it. If not, you can set a scheduled event to remind you when it does come on. If your set top box supports recording, you can schedule a recording for the program.

For more information on Guide, see section **5 Guide**.

For more information on setting Reminders, Autotunes and Recordings, see **Setting Reminders, Autotunes and Recordings** in section **6 Guide & Recording**.

Adjust Volume

The **VOL+/-** button will adjust the volume gradually.

The **MUTE** button will toggle the sound on and off.

System Buttons

There are a number of buttons on your remote that display different features of your service.

1 Remote Control Basics

MENU displays the Menubar when in cable [STB] mode, and in [TV] mode you will see your TV's menu. The Menubar provides quick access to every feature supported by your service.

For more information about the Menubar, see section [4 Menubar](#).

INFO displays the Infobar, a feature that lets you see information on what you're watching, what's coming on next, and what's on other channels.

For more information on the Infobar, see section [3 Infobar](#).

EXIT causes your set top box to exit whatever screen you are seeing and return you to normal TV viewing. If you ever get lost on a screen, it is always safe to press **EXIT** and then start over.

ADB Potenza Remote Instruction Manual

Programming Remote Control

Your remote control can handle several devices. However, first you have to set up your remote control for your equipment. You can do this in one of the following ways:

Brand Setup

First, find the manufacturer of your equipment on the Brand Codes list. If the manufacturer's brand is not listed, go to **Automatic Search** below. To set up your remote control follow these steps:

1. Turn the device on.
2. Press TV / AUD / DVD / AUX / STB depending on what mode you want to handle and then hold RCU SETUP until the device key blinks twice.
3. Enter one of the codes from the list. If the code was correct the mode key blinks twice. If not, the key emits one long blink. Then, you will have to repeat steps 2 and 3 until entering the correct code.
4. Press POWER. If the device has turned off, you have chosen the right code. If none of the codes work, try **Automatic Search**.

Automatic Search

Automatic Search should only be undertaken if none of the brand codes works or your brand name is not listed. Use the **Automatic Search** option.

1. Switch on your device. Then press appropriate mode key, for example TV if you want to set up a TV.
2. Press and hold RCU SETUP until the mode key blinks twice.
3. Press 9 9 1. The mode key blinks twice.
4. Aim the remote at the device and press POWER.
5. Press CH + and CH- repeatedly until the device is switched off.
6. Press POWER to turn the TV on.
7. Next, press RCU SETUP to store the code for your device. The mode key blinks twice. Your remote control is now programmed to operate your TV set.
8. To search codes for other devices repeat steps 1 through 7, but substitute the TV key with the appropriate one for the mode you are searching for.

Finding Your Code

If you want to know what code operates your device, you can obtain it with the **Device Code** option. To find out the code, follow these instructions:

1. Switch on your device. Then press appropriate mode key, for example TV if you want to set up a TV.
2. Press and hold the RCU SETUP until the mode key blinks twice.
3. Press 9 9 0. The mode key blinks twice.
4. For the first digit of your code, press 1 and count the number of times the key blinks (e.g. 2 blinks = 2). If the light does not blink, the digit is 0. For the second digit press 2 and count the number of blinks. Do the same for the remaining digits.
5. To check for other device codes, repeat the above steps, but substitute the TV key with the appropriate one for the device you are checking.

Using Learning

Your remote control includes a learning feature. It means you can transfer some unique functions from the remote control of other device to this remote control.

1. Press RCU SETUP until the last selected mode key blinks twice. Then press 9 7 5.
2. Press the mode key. For example to transfer a function from DVD remote control press DVD.
3. Press the key on which the function will be stored.
4. Place your remote control and the device remote control (e.g. your DVD remote control) head-to-head, about 5 centimeters / 2 inches apart.
5. On the device remote, press and hold the key to be learned. The target remote control will blink rapidly and turn off. Keep holding the key on the device remote control until the device key on the target remote blinks twice.
6. If the learning failed, the device key emits one long blink. You will have to repeat step 5.

Deleting a Single Learning Key

Once you have used a particular key to store a new function on it, you may restore the original function of the key.

1. Press RCU SETUP until the last selected mode key blinks twice. Then press 9 7 6.
2. Press the mode key (for example DVD). The mode key blinks twice.
3. Press the key containing the learned function. The mode key blinks twice.
4. Press and hold RCU SETUP to exit programming.

Deleting All Learned Keys

1. Press RCU SETUP until the last selected mode key blinks twice. Then press 9 7 6.
2. Press the mode key twice (for example DVD). All the learned keys for this mode will be cleared. The mode key blinks twice.
3. Press and hold RCU SETUP to exit programming.

Using the Master Power Key

Your remote has a feature that enables you to sequentially turn up to five devices on and off with a single key press. This functionality works only if the remote control is in STB mode.

1. Press RCU SETUP until the last selected mode key blinks twice.
2. Press 9 9 5. The last selected mode key will blink twice.
3. Press POWER.
4. Press the mode key for the device you would like to turn on first and press MASTER POWER. Then press the mode key for the second device to turn on and once again MASTER POWER. Repeat the steps until adding all the devices you want to be operated.
5. To save settings press STB.
6. Next press RCU SETUP to exit programming.

Volume Lock

The remote control enables you to control the volume level of different devices without selecting the mode key for each device. For example: if you are watching a film on your DVD player, you can adjust the volume for your TV set, without pressing the TV mode key on your remote control.

To set the Volume Lock for your TV:

1. Press and hold RCU SETUP until the last selected mode key blinks twice.
2. Press 9 9 3. The last selected mode key will blink twice.
3. Then press TV and the device key blinks twice.

Deleting “Volume Lock” for a particular device (for example for DVD)

1. Press DVD once.
2. Press and hold down the RCU SETUP key until the mode key blinks twice.
3. Press 9 9 3. The mode key blinks twice.
4. Press the VOL- key and the mode key will blink four times.

Now being in DVD mode, you will be able to control VOL+/- or MUTE functions of your DVD only (provided it was volume control).

Deleting “Volume Lock” for all devices

1. Press and hold the RCU SETUP key until the last selected mode key blinks twice.
2. Press 9 9 3.
3. Press the VOL+ key and the last selected mode key will blink four times.

Clearing Custom Programming

You may clear the custom programming and revert to the default settings of the remote control. To do that, follow these steps:

1. Press RCU SETUP until the last selected mode key blinks twice.
2. Enter 9 8 0. The last selected mode key blinks twice, pauses, and blinks twice again.

This procedure does not affect your setup codes. They remain in memory of the remote.

Troubleshooting

Problem	Solution
Device key does not blink when you press a key.	Replace the batteries with two (2) new AA batteries.
Device key blinks when you press a key, but home entertainment device does not respond.	Make sure you are aiming the remote control at your home entertainment device and that you are within 4.5 meters / 15 feet of the device you are trying to control.
The remote control does not control home entertainment devices or commands are not performing properly.	Try all listed codes for the device brand being set up. Make sure all devices can be operated with an infrared remote control.
TV/VCR Combo does not respond properly.	Use the VCR codes for your brand. Some combo units may require both a TV code and a VCR code for full operation.
PLAY and STOP keys do not work on a Motorola DCT-2000 cable converter.	Re-program the STB key for cable code 0476.
Tried Search Method and still could not find a working code.	Try the Search Method again after clearing out the device key as follows: <ul style="list-style-type: none"> a. Press and hold RCU SETUP until device key blinks twice. b. Enter 9 9 2. c. Press and release the device key to be cleared twice.
Remote control does not turn on Sony or Sharp TV/VCR Combo.	For power on, these products require programming TV codes on the remote control. For Sony, use TV code 0000 and VCR code 0032. For Sharp, use TV code 0093 and VCR code 0048.

Brand Codes

The following codes are used when configuring the remote control. First find the manufacturer of your equipment and then try the codes one by one.

Audio Amplifiers

Adcom	0577, 1100	Optimus	0395, 0823
Bose	0674	Parasound	0246
Duraband	1561	Philips	0892
Elan	0647	Pioneer	0823
GE	0078	Polk Audio	0892
Haman/Kardon	0892	RCA	0823
JVC	0331	Realistic	0395
Left Coast	0892	Sansui	0321
Lenoxx	1561	Shure	0264
Luxman	0165	Sony	0689, 0815, 1126
Marantz	0892, 0321	Soundesign	0078, 0211
McIntosh	0251	Victor	0331
Nakamichi	0321	Wards	0078, 0211
NEC	0264	Yamaha	0354, 0133

Audio Accessories

Accurian	1106	Motorola	1464
Altec Lansing	0607, 1056, 1485	NaviPod	1644
Apple	1115, 1644	Netgear	1785
Cambridge Soundworks	1530	Omnifi	1605
Creative	0872	Onkyo	1789
D-Link	1522	Roku	1828
DLO	1155	Sonance	1917
Integra	1789	SSI	1522
iPort	1917	Yamaha	1809, 1810
Marantz	1491		

Audio Receivers

ADC	0531	Magnavox	1189, 1269, 0189, 0391, 0531, 1514
Aiwa	1405, 0189, 0121, 0405, 1243, 1388, 1641	Marantz	1189, 1269, 0189, 1289
Akai	1512	Mitsubishi	1393
Alco	1390	Norcent	1389
Amphion Media Works	1563, 1615	Nova	1389
AMW	1563, 1615	Onkyo	0135, 0842, 1298, 1320, 1531
Anam	1609, 1074	Optimus	1023, 0080, 0186, 0531, 0670, 1074
Apex Digital	1257, 1430, 1774	Oritron	1366, 1497
Arcam	1120	Panasonic	1308, 1518, 0309, 0367, 1288, 1316, 1548, 1633, 1763, 1764
Audiotronic	1189	Philips	1189, 1269, 0189, 0391, 1120, 1266
Audiovox	1390, 1627	Pioneer	1023, 0014, 0080, 0150, 0244, 0531, 0630, 1384
B & K	0701, 0820, 0840	Polaroid	1508
BK	0702	Polk Audio	0189, 1289, 1414
Bose	1229, 1629, 1841, 1933	Proscan	1254
Cambridge Soundworks	1370	RCA	1023, 1609, 1254, 0080, 0531, 1074, 1390, 1511
Capetronic	0513	Rio	1869
Carver	1189, 0189	Samsung	1295, 1500
Classic	1352	Sansui	0189
Coby	1389	Sanyo	1251, 1469, 1801
Curtis Mathes	0080	Sharp	0186, 1286
Daewoo	1250	Sharper Image	1556
Delphi	1414	Sherwood	1077, 1517, 1653
Denon	1360, 0004, 1142	Sirius	1627, 1811, 1987
Fisher	1801	Sonic Blue	1532, 1869
Gateway	1517	Sony	1058, 1441, 1258, 1759, 1622, 0474, 1349, 1406, 1442, 1558, 1658, 1758, 1858
Go Video	1532	Soundesign	0670
Harman/Kardon	0110, 0189, 0891, 1304, 1306	Stereophonics	1023
Hitachi	1801	Sunfire	1313
Integra	0135, 1298, 1320	Teac	1074, 1390, 1528
JBL	0110, 1306	Technics	1308, 1518, 0309
JVC	1374, 1495, 1811, 1871	Thorens	1189
Kenwood	1313, 1570, 1569, 0186	Toshiba	1788
KLH	1390, 1412, 1428	Venturer	1390
Koss	1366, 1497	Wards	0189, 0014, 0080
Lasonic	1798	XM	1406, 1414
LG	1293	Yamaha	0176, 0186, 1176, 1276, 1331, 1375
Linn	0189	Zenith	0857, 1293
Liquid Video	1497		

Cable/DVR/PVR Combos

Americast	0899	Pioneer	1877, 0877
Amino	1822	RCA	1256
Digeo	1187	Sasktel	1737
General Instrument	0476, 0810	Samsung	1376, 1877
Jerrold	0476, 0810	Scientific Atlanta	1877, 0877
Motorola	1376, 0810, 1187, 1106, 1540, 0476	Sony	1006
Myrio	1822	Supercable	0276
Pace	1376, 1877, 0237	Thomson	1256
Panasonic	1376, 1877	Zenith	0899

Cable Boxes/ Converters

ABC	0003, 0008, 0014, 0017	Pioneer	1877, 0877, 0144, 0533
Americast	0899	Pulsar	0000
Amino	1602, 1822	Quasar	0000
Bell & Howell	0014	RadioShack	0883
Bell South	0899	RCA	1256
Clearmaster	0883	Regal	0279, 0273
ClearMax	0883	Runco	0000
Coolmax	0883	Samsung	1376, 1877, 0144
Digeo	1187	Sasktel	1737
Digi	0637	Scientific Alaska	1877, 0877, 0477, 0008, 0017
Director	0476	Sejin	1602
Dumont	0637	Sony	1006
General Instrument	0476, 0810, 0276, 0003	Starcom	0003
Goldstar	0144	Supercable	0276
Hamlin	0009, 0273	Supermax	0883
i3 Micro	1602	Thomson	1256
Jerrold	0476, 0810, 0276, 0003, 0012, 0014	Tocom	0012
Memorex	0000	Torx	0003
Motorola	1376, 0476, 0810, 0276, 1187, 1254, 1106, 1540	Toshiba	0000
Multitech	0883	Tristar	0883
Myrio	1602, 1822	V2	0883
Pace	1376, 1877, 0237, 0008	Viewmasster	0883
Panasonic	1376, 1877, 0000, 0107	Vision	0883
Panther	0637	Vortex View	0883
Paragon	0000	Zenith	0000, 0525, 0899
Philips	1305, 0317		

DVD Recorders

Accurian	1416	Magnavox	0646, 0675, 1506
Apex Digital	1056	Panasonic	0490
Aspire Digital	1168	Philips	0646
Coby	1086	Pioneer	0631
CyberHome	1129, 1502	Polaroid	1086
Funai	0675, 1334	RCA	0522
Gateway	1073, 1158	Samsung	0490
Go Video	0741, 1158, 1304, 1730	Sensory Science	1158
iLo	1348	Sharp	0675
JVC	1164, 1275	Sony	1033, 1431, 1432, 1433
Kreisen	1421	Sylvania	0675
LG	0741	Zenith	0741
LiteOn	1158, 1416, 1440		

DVD Combos

Akai	0695	LG	1526
Audiovox	1071, 1121, 1122	Mintek	1472
iLo	1472	RCA	1193
Initial	1472		

DVR/PVR Systems

Amino	1615	Motorola	0869
DirecTV	1377, 0392, 0639, 1142, 1076, 0099, 1392, 1442, 1443, 1444, 1640	Philips	1142, 1442, 0739
Dish Network Sys	1505, 0775	Proscan	0392
Dishpro	1505, 0775	RCA	1392
EchoStar	1505, 0775, 1170	Samsung	1442, 0739
Expressvu	0775	Sony	0639, 1640
Hughes Network Sys	1142, 1442, 1443, 1444, 0739	Star Choice	0869
JVC	1170		

DVD Players

Accurian	1072, 1416	Greenhill	0717	Portland	0770
Adcom	1094	Harman/Kardon	0582, 0702	Presidian	0675, 1072
Advent	1016	Hitachi	0573, 0664, 1247, 1919	Prima	1016
Aiwa	0641	Hiteker	0672	Primare	1467
Akai	0695, 0770 0899, 1089	iLo	1348, 1472	Princeton	0674
Alco	0790	Initial	0717, 1472	Proscan	0522
Allegro	0869	Innovative Tech	1542	ProVision	0778
Amphion Media	0872, 1245	Insignia	1268	Qwestar	0651
AMW	0872, 1245	Integra	0627	RCA	0522, 0571, 0717, 0790, 0822, 1022, 1132, 1193
Apex Digital	0672, 0717, 0755, 0794, 0796, 0797, 0830, 1004, 1020, 1056, 1061, 1100	Jaton	1078	Rio	0869
Arrgo	1023	JBL	0702	RJTech	1360
Aspire Digital	1168, 1407	Jensen	1016	Rotel	0623, 1178
Audiologic	0736	JSI	1423	Rowa	0823
Audiovox	0790, 1041, 1071, 1072, 1121, 1122	JVC	0558, 0623, 0867, 1164, 1275, 1602, 1863	Sampo	0698, 0752, 1501
Axion	1071, 1072	jWin	1049, 1051	Samsung	0490, 0573, 0820, 0899, 1044, 1075
B & K	0655, 0662	Kawasaki	0790	Sansui	0695
BBK	1224	Kenwood	0490, 0534, 0682, 0737	Sanyo	0670, 0695, 0873, 1919
Bel Canto Design	1571	KLH	0717, 0790, 1020, 1149, 1216	Sensory Sci.	1158
Blaupunkt	0717	Konka	0711, 0719, 0720, 0721	Sharp	0630, 0675, 0752, 1256
Blue Parade	0571	Koss	0651, 0896, 1423	Sharper Img	1117
Broksonic	0695, 0868, 1419	Kreisen	1421	Sherwood	0633, 0770, 1043, 1077, 1889
Buffalo	1882	Landel	0826	Shinsonic	0533, 0839
Cary Audio Des.	1477	Lasonic	0798, 1173	Sigma Des.	0674
CAVS	1057	Lenox	1127	Sonic Blue	0869, 1099
Centrios	1577	LG	0591, 0741, 0801, 0869, 1526	Sony	0533, 1533, 0864, 1033, 1431, 1432, 1433, 1548, 1892
Cinea	0831	LiteOn	1058, 1158, 1416, 1440	Sound Mob	1298
Cinego	1399	Loewe	0511	Sova	1122
CineVision	0876, 0833, 0869	Magnavox	0503, 0539, 0646, 0675, 0821, 1268, 1506	Sungale	1074, 1532
Citizen	1277	Malata	0782, 1159	Superscan	0821
Coby	0778, 0852, 1086, 1107, 1165, 1177, 1351	Marantz	0539	SVA	0860, 1105
Craig	0831	McIntosh	1273	Sylvania	0675, 0821, 1268
Curtis Mathes	1087	Memorex	0695, 0831, 1270	Symphonic	0675, 0821
CyberHome	0816, 0874, 1023, 1024, 1117, 1129, 1502, 1537	Microsoft	0522, 1708	TAG McLaren	0894
D-Link	1881	Mintek	0839, 0717, 1472	Teac	0790, 0809
Daewoo	0784, 0705, 0833, 0869, 1169, 1172, 1234, 1242, 1441, 1443	Mitsubishi	1521, 0521	Technics	0490, 0703
Denon	0490, 0634	Momitsu	1082	Tecnosonic	0730
Desay	1407, 1455	NAD	0741	Techwood	0692
Diamond Vision	1316, 1609, 1610	Nakamichi	1222	Terapin	1031
Disney	0675, 1270	NEC	0785	Theta Digi.	0571
Dual	1068, 1085	Nesa	0717, 1603	Toshiba	0503, 0695, 1045, 1154, 1854
Durabrand	1127	NeuNeo	1454	Tredex	0799, 0800, 0803, 0804
DVD2000	0521	Next Base	0826	Urban Con.	0503
Emerson	0591, 0675, 0821, 1268	NexxTech	1402	US Logic	0839
Enterprise	0591	Norcent	1003, 0872, 1107, 1265, 1457	Valor	1298
ESA	0821, 1268, 1443	Onkyo	0503, 0627, 0792	Venturer	0790
Fisher	0670, 1919	Oppo	1224, 1525	Vialta	1509
Funai	0675, 1268, 1334	OptoMedia Elec.	0896	Vizo	1064, 1226
Gateway	1073, 1077, 1158	Oritron	0651	Vocopro	1027, 1360
GE	0522, 0815, 0717	Panasonic	0490, 0632, 0703, 1362, 1462, 1490, 1762	Xbox	0522, 1708
Go Video	0744, 0715, 0741, 0783, 0833, 0869, 1044, 1075, 1099, 1144, 1158, 1304, 1443, 1730	Philips	0503, 0539, 0646, 0675, 0854, 1260, 1267, 1354	Xwave	1001
Go Vision	1071, 1072	Pioneer	0525, 0571, 0631, 0632	Yamaha	0490, 0539, 0545
Goldstar	0741	Polaroid	1020, 1061, 1086, 1245, 1316, 1478, 1480, 1482	Zenith	0503, 0591, 0741, 0869
GPX	0699, 0769	Polk Audio	0539	Zoece	1265

Satellite Receivers

AlphaStar	0772	NEC	1270
Amino	1615	Next Level	0869
Chaparral	0216	Panasonic	0247, 0701
Coolsat	1806	Pansat	1801
Crossdigital	1109	Paysat	0724
DirectTV	1377, 0392, 0566, 0639, 1639, 1142, 0247, 0749, 1749, 0724, 0819, 1856, 1076, 1108, 0099, 1109, 1392, 1414, 1442, 1443, 1444, 1609, 1640	Philips	1142, 0749, 1749, 0724, 1076, 0722, 0099, 1442
Dish Network System	1505, 1005, 0775, 1170 1775	Proscan	0392, 0566
Dishpro	1505, 1005, 0775, 1775	Proton	1535
Echostar	1505, 1005, 0775, 1170, 1775	RadioShack	0869
Expressvu	0775, 1775	RCA	0566, 0855, 0143, 1392
GE	0566	Samsung	1377, 1276, 1108, 1109, 1442, 1609
General Instrument	0869	Sanyo	1219
GOI	0775, 1775	SKY	0856
Goodmans	1246	Sony	0639, 1639, 1640
Hisense	1535	Star Choice	0869
Hitachi	0819, 1250	Tivo	1142, 1442, 1443, 1444
HTS	0775, 1775	Toshiba	0749, 1749, 0790, 1285
Hughes Network Sys	1142, 0749, 1749, 1442, 1443, 1444	UltimateTV	1392, 1640
Humax	1790	Ultrasat	1806
iLo	1535	Uniden	0724, 0722
JVC	0775, 1170, 1775	US Digital	1535
LG	1226, 1414	USDTV	1535
Magnavox	0724, 0722	Voom	0869
Memorex	0724	Zenith	1856, 0856
Mitsubishi	0749		
Motorola	0869		

TV/DVD Combos Controlled by the TV

Accurian	1803	ESA	1963	Mintek	1990
Advent	1933	Funai	1963	Panasonic	1941
Akai	1935	Hitachi	1960	Polaroid	1991
Apex Digital	1943	iLo	1990	Prima	1933
Audiovox	1937, 1951, 1952	Initial	1990	RCA	1948, 1958, 2002
Axion	1937	Insignia	1963, 2002	Samsung	1903
Broksonic	1935	Jensen	1933	Sansui	1935
Cinego	1986	KLH	1962	Sova	1952
Diamond Vision	1997	LG	1993	Sylvania	1963
Emerson	1963	Magnavox	1963	Toshiba	1635, 1935

TV/VCR Combos Controlled by the DVD

Advent	1016	Jensen	1016
Akai	0695	KLH	1261
Apex Digital	0830	Konka	0719, 0720
Audiovox	1071, 1121, 1122	LG	1526
Axion	1071	Magnavox	1268
Broksonic	0695	Mintek	1472
Cinego	1399	Panasonic	1490
Diamond Vision	1610	Philips	0854, 1260
Emerson	0675, 1268	Polaroid	1480
ESA	1268	Prima	1016
Funai	1268	RCA	1022, 1193
Go Vision	1071	Samsung	0899
Hitachi	1247	Sansui	0695
iLo	1472	Sova	1122
Initial	1472	Sylvania	0675, 1268
Insignia	1268	Toshiba	0695

TV's (HDTV)

Advent	0842
Hitachi	1960
Marantz	0854
Mitsubishi	0150
Panasonic	0250, 0650, 1291
Pioneer	0679
Princeton	0717
RCA	1448
Samsung	0812, 0702
Sharp	0688, 0689
Toshiba	1256

TVs

A-Mark	0003	CyberHome	0794
Abex	0032	Cytron	1326
Accurian	1803	Daewoo	0451, 0092, 1661, 0019, 0039, 0066, 0067, 0091, 0623, 0661, 0672
Action	0873	Daytron	0019
Admira	0093, 0463	Dell	1080, 1178, 1264, 1403
Advent	0761, 0783, 0815, 0817, 0842, 1933	Denon	0145, 0511
Adventura	0046	Denstar	0628
Aiko	0092	Diamond Vision	1996, 1997
Aiwa	0701	Dumont	0017, 0019
Akai	0812, 0702, 0030, 0098, 0672, 1207, 1903, 1935	Durabrand	0463, 0180, 0178, 0171, 1034, 0003
Alaron	0179, 0183, 0216	Dwin	0720, 0774
Albatron	0700, 0843	Dynatech	0049
Ambassador	0177	Electroband	0000, 0185
America Action	0180	Electrograph	1623, 1755
Ampro	0751	Electrohome	0381, 0389, 0409
Anam	0180, 0004, 0009, 0068	Emerson	0154, 0236, 0463, 0180, 0178, 0171, 1963, 1944, 0623, 0282, 0280, 0270, 0185, 0183, 0182, 0181, 0179, 0177, 0158, 0039, 0038, 0019
Anam National	0055, 0161	Emprex	1422, 1546
AOC	0030, 0003, 0019, 0052, 0137, 0185, 1365	Envision	0030, 0813, 1365
Apex Digital	0748, 0879, 0765, 0767, 0890, 1217, 1943	Epson	0833, 0840, 1290
Archer	0003	ESA	0812, 0171, 1944, 1963
Astar	1548	Fisher	0154, 0159
Audiovox	0451, 0180, 0092, 0003, 0623, 0710, 0802, 0846, 0875, 1284, 1937, 1951, 1952	FlexVision	0710
Aventura	0171	Fujitsu	0179, 0186, 0683, 0809, 0853
Axion	1937	Funai	0180, 0171, 0179, 1271, 1963
Belcor	0019	Futurtech	0180
Bell& Howell	0154, 0016	Gateway	1001, 1002, 1003, 1004, 1755, 1756
BenQ	1032, 1315	GE	1447, 0047, 0051, 0451, 0178, 1347, 0747, 0282, 0279, 0251, 0174, 0138, 0135, 0055, 0029, 0027, 0021
Bradford	0180	Gibralter	0017, 0030, 0019
Brockwood	0019	Go Video	0886
Broksonic	0236, 0463, 0003, 1935, 1938	GoldStar	0178, 0030, 0001, 0002, 0019, 0032, 0106, 0409
Byd:sign	1309, 1311	Goodmans	0360
Cadia	1283	Gradiente	0392
Candle	0030, 0046, 0056, 0186	Grunpy	0180, 0179
Carnivale	0030	Haier	1034, 0768
Carver	0054, 0170	Hallmark	0178
CCE	0217, 0329	Hannspree	1348, 1351, 1352
Celebrity	0000	Hantarex	1338
Celera	0765	Harley Davidson	0043, 0179
Champion	1362	Harman/ Kardon	0054, 0078
Campion	1362	Harvard	0180, 0068
Changhong	0765	Havermy	0093
Cinego	1986	Helios	0865
Citizen	0060, 0030, 0092, 0039, 0046, 0056, 0186, 0280	Hello Kitty	0451
Clairtone	0185	Hewlett Packard	1088, 1089, 1101, 1494, 1502
Clarion	0180	Hisense	0748
Commercial Sol.	1447, 0047	Hitachi	1145, 0145, 0016, 0032, 0038, 0056, 0095, 0097, 0151, 0173, 0227, 0279, 0409, 0413, 0797, 1960
Concerto	0056	HP	1088, 1089, 1101, 1494, 1502
Contec	0180, 0157, 0158, 0185	Hyundai	0849, 1219, 1294
Craig	0180, 0161	iLo	1286, 1603, 1990
Crosley	0054	Infinity	0054
Crown	0180, 0039	Initial	1603, 1990
Curtis Mathes	0047, 0054, 0154, 0451, 0093, 0060, 0702, 0030, 0145, 0166, 1347, 1147, 0747, 0466, 0056, 0039, 0016	Insignia	0171, 1204, 1326, 1517, 1963, 2002
Citizen	0060, 0030, 0092, 0039, 0046, 0056, 0186, 0280	Inteq	0017
Clairtone	0185	Janeil	0046
Clarion	0180	JBL	0054
Commercial Sol.	1447, 0047	JCB	0000
CXC	0180	Jensen	0761, 0050, 0815, 0817, 1299, 1933

JVC	0053, 0036, 0069, 0160, 0169, 0182, 0731, 1253	Optomoa	0887
Kamp	0216	Optonica	0093, 0165
Kawasho	0158, 0216, 0308	Orion	0236, 0463, 1463, 0179
Kaypani	0052	Panasonic	0250, 0051, 0055, 0162, 0226, 0338, 0375, 0650, 1291, 1410, 1941, 1946, 1947
KEC	0180	Penney	0047, 0156, 0051, 0060, 0178, 0030, 1347, 0747, 0309, 0149, 0138, 0135, 0110, 0039, 0032, 0027, 0021, 0019, 0018, 0003, 0002
Kenwood	0030, 0019	Petters	1523
KLH	0765, 0767, 1962	Philco	0054, 0030, 0019, 0020, 0028, 0096, 0302
Kloss	0024, 0046, 0078	Philips	1454, 0054, 0690, 1154, 1483
KMC	0106	Pilot	0030, 0019, 0039
Konka	0628, 0632, 0638, 0703, 0707	Pioneer	0166, 0038, 0172, 0679, 0866, 1260, 1398
Kost	1262, 1483	Polaroid	0765, 0865, 1262, 1276, 1314, 1316, 1326, 1327, 1328, 1341, 1498, 1523, 1991, 1992
KTV	0180, 0030, 0039, 0183, 0185, 0217, 0280	Portland	0092, 0019, 0039
LG	1265, 0178, 0442, 0700, 0829, 0856, 1178, 1325, 1423, 1758, 1993	Prima	0761, 0783, 0815, 0817, 1933
Loewe	0136	Princeton	0700, 0717
Logik	0016	Prism	0051
Luxman	0056	Proscan	1447, 0047, 0747, 1347
LXI	0047, 0054, 0154, 0156, 0178, 0148, 0747	Proton	0178, 0003, 0031, 0052, 0466
Magnavox	1454, 0054, 0030, 0706, 1963, 1944, 1525, 1254, 1198, 0802, 0386, 0230, 0187, 0186, 0179, 0096, 0036, 0028, 0024, 0020	Protron	1320, 1323
Majestic	0015, 0016	Proview	0835, 1401, 1498
Marantz	0054, 0030, 0444, 0704, 0854, 0855, 1154, 1398	Pulsar	0017, 0019
Matsushita	0250, 0650	Quasar	0250, 0051, 0055, 0165, 0219, 0650
Maxent	0762, 1211, 1755	RadioShack	1447, 0047, 2002, 1958, 1953, 1948, 1547, 1347, 1247, 1147, 1047, 0747, 0679, 0278, 0147, 0135, 0747, 0090, 0038, 0029, 0019, 0018
Megapower	0700	RCA	1447, 0047, 2002, 1958, 1953, 1948, 1547, 1347, 1247, 1147, 1047, 0747, 0679, 0278, 0174, 0135, 0090, 0038, 0029, 0019, 0018
Megatron	0178, 0145, 0003	Realistic	0154, 0180, 0178, 0030, 0019, 0032, 0039, 0056, 0165
MEI	0185	Rhapsody	0183, 0185, 0216
Memorex	0154, 0463, 0150, 0178, 0016, 0106, 0179	Runco	0017, 0030, 0251, 0497, 0603, 1398
MGA	0150, 0178, 0030, 0019, 0155	Sampo	0030, 0032, 0039, 0052, 0100, 0110, 0762, 1755
Midland	0047, 0017, 0051, 0032, 0039, 0135, 0747	Samsung	0060, 0812, 0702, 0178, 0030, 1903, 1575, 1395, 1312, 1060, 0814, 0766, 0427, 0408, 0329, 0056, 0032, 0019
Mintek	1603, 1990	Samsux	0039
Minutz	0021	Sansui	0463, 1409, 1935
Mitsubishi	0093, 1250, 0150, 0178, 0014, 0019, 0098, 0155, 0331, 0358, 0836, 0868, 1550	Sanyo	0154, 0088, 0107, 0146, 0159, 0232, 0484, 0799, 0893, 1142
Monivision	0700, 0843	Sceptre	0878, 1217, 1360, 1599
Motorola	0093, 0055, 0835	Scimitsu	0019
Moxell	0835	Scotch	0178
MTC	0060, 0030, 0019, 0049, 0056, 0091, 0185, 0216	Scott	0236, 0180, 0178, 0019, 0179, 0309
Multitech	0180, 0049, 0217	Sears	0047, 0054, 0154, 0156, 0178, 0171, 0015, 0056, 0146, 0148, 0149, 0159, 0168, 0179, 0281, 0747
NAD	0156, 0178, 0866	Sharp	0093, 0039, 0153, 0157, 0165, 0220, 0281, 0386, 0398, 0491, 0688, 0689, 0818, 0851, 1602
NEC	0030, 0019, 0036, 0056, 0170, 0434, 0497, 0882, 1398, 1704	Sheng Chia	0093
Neovia	1338	Sherwood	1399
NetTV	0762, 1755	Shogun	0019
Nikko	0178, 0030, 0092, 0317	Signature	0016
Noblex	0430	Signet	1262
Norcent	0748, 0824, 1089, 1365, 1589, 1590, 1591	SIM2 Multimedia	1297
Norwood Micro	1286, 1296, 1303	Simpson	0186, 0187
Noshi	0018	Sony	1100, 0000, 0011, 0080, 0111, 0273, 0353, 0810, 0834, 1317
NTC	0092	Soundesign	0180, 0178, 0179, 0186
Olevia	1144, 1240, 1331, 1610	Sova	1320, 1952
Olympus	1342	Soyo	1520
Onwa	0180	Spectricon	0003, 0137
Optimus	0154, 0250, 0166, 0650	Soyo	1520

Spectricon	0003, 0137	Tosonic	0185
Squareview	0171	Totevision	0039
SSS	0180, 0019	Trical	0157
Starlite	0180	TVS	0463
Studio Experience	0843	Ultra	0391, 1323
Superscan	0093, 0864	Universal	0027
Supre-Macy	0046	Universum	1337
Supreme	0000	US Logic	1286, 1303
SVA	0748, 0587, 0768, 0865, 0870, 0871, 0872	Vector Research	0030
Sylvania	0054, 0030, 0171, 0020, 0028, 0065, 0096, 0381, 1271, 1944, 1963	Victor	0053
Symphonic	0180, 0171, 1944	Video Concepts	0098
Syntax	1144, 1240, 1331	Vidikron	0054, 0242, 1398
Tandy	0093	Vidtech	0178, 0019, 0036
Tatung	0003, 0049, 0055, 0396, 1101, 1285, 1286, 1287, 1288, 1361, 1756	Viewsonic	0797, 0857, 0864, 0885, 1330, 1342, 1578, 1627, 1755
Technics	0250, 0051	Viking	0046, 0312
Technol Ace	0179	Viore	1207
Technovox	0007	Visart	1336
Techview	0847	Vizio	0864, 0885, 1499, 1756, 1758
Techwood	0051, 0003, 0056	Wards	0054, 0178, 0030, 1156, 0866, 0202, 0179, 0174, 0165, 0111, 0096, 0080, 0056, 0029, 0028, 0027, 0021, 0020, 0019, 0016
Teknika	0054, 0180, 0150, 0060, 0092, 0016, 0019, 0039, 0056, 0175, 0179, 0186, 0312, 0322	Waycon	0156
Telefunken	0702, 0056, 0074	Westinghouse	0885, 0889, 0890, 1282, 1577
Tera	0031	White Westinghouse	0463, 0623
Thomson	0209, 0210	Wyse	1365
TMK	0178, 0056, 0177	Yamaha	0030, 0019, 0769, 0797, 0833, 0839
TNCi	0017	Zenith	0017, 0463, 1265, 0178, 0092, 0016
Toshiba	0154, 1256, 0156, 1265, 0060, 1945, 1935, 1704, 1656, 1635, 1356, 1343, 1325, 1306, 1156, 0845, 0832, 0650, 0149, 0036	Zonda	0003

TVs (LCD)

Accurian	1803	Jensen	1299	Sharp	0093, 0818, 1602
Action	0873	Kost	1262	Sherwood	1399
Akai	1935	LG	0856, 1178, 1993	Signet	1262
AOC	1365	Magnavox	1454, 0802, 1198	Sony	0810
Apex Digital	0890, 1217	Marantz	0855	Sova	1320
Astar	1548	Maxent	0762, 1211	Soyo	1520
Audiovox	0180, 0710, 0802, 0846, 0875, 1284, 1937, 1951, 1952	Mintek	1603, 1990	Superscan	0864
BenQ	1315	Mitsubishi	1250	SVA	0587, 0870, 0871
Byd:sign	1309, 1311	NetTV	0762	Sylvania	0171, 1271
Cadia	1283	Norcent	1365, 1589, 1591	Symphonic	0171
CyberHome	0749	Norwood Micro	1286, 1296	Syntax	1144, 1240, 1331
Dell	1080, 1178, 1264	Olevia	1144, 1240, 1331, 1610	Tatung	1286
Emprex	1422, 1546	Panasonic	0650, 1941	Techview	0847
Envision	0813, 1365	Petters	1523	Toshiba	0845, 1343, 1635, 1656
FlexVision	0710	Philips	1454, 1483	Ultra	1323
Funai	0171	Polaroid	1262, 1276, 1316, 1341, 1498, 1523	US Logic	1286
Go Video	0886	Protron	1320, 1323	Vidikron	1398
Hannspree	1348, 1351	Proview	1401	Viewsonic	0857, 0864, 0885, 1330, 1578, 1627
Hewlett Packard	1088	RCA	0047, 1958	Visart	1336
HP	1088	Sampo	0762	Vizio	0864, 0885, 1756
Hyundai	0849, 1219, 1294	Samsung	0812, 0766, 0814, 1395, 1575	Westinghouse	0885, 0889, 0890, 1282, 1577
iLo	1286, 1603, 1990	Sansui	1409	Wyse	1365
Initial	1603, 1990	Sanyo	1142	Zenith	1265
Insignia	1204, 1517, 2002	Sceptre	0878, 1217, 1360, 1599		

TV/VCR Combos Controlled by the TV

America Action	0180
Audiovox	0180
Emerson	0236

TV/VCR/DVD Combos Controlled by the VCR

Sharp	0807
--------------	------

TV/VCR Combos Controlled by the VCR

America Action	0278	LG	1037	RadioShack	0000, 1037
Audiovox	0278	Lloyd's	0000	RCA	0240, 1035, 1807, 1060
Broksonic	0002, 0479, 1479	Magnasonic	0593, 1278	Samsung	1014
Citizen	1278	Magnavox	0000, 0593, 1781	Sansui	0000, 0479, 1479
Colt	0072	Magnin	0240	Sanyo	0240
Curtis Mathes	1035	Memorex	0162, 0454, 1037, 1162, 1237, 1262	Sears	0000, 1237
Daewoo	0637, 1278	MGA	0240	Sony	0000, 1232
Emerson	0002, 0294, 0479, 0593, 1278, 1479	Mitsubishi	0807	Sylvania	1781
Funai	0000	Optimus	0162, 0454, 0593, 1162, 1262	Symphonic	0000, 0593
GE	0240, 0807, 1035, 1060	Orion	0002, 0479, 1479	Thomas	0000
GoldStar	1237	Panasonic	0162, 1035, 1162, 1262	Toshiba	0845, 1145
Harley Davidson	0000	Penney	0240, 1035, 1237	White Westing.	0637
Hitachi	0000	Quasar	0162, 1035, 1162	Zenith	0000, 0479, 0637, 1479

TV/VCR/DVD Combos Controlled by the TV

Akai	1903	Panasonic	1946, 1947
Broksonic	1938	Polaroid	1992
Diamond Vision	1996	RCA	1953
Emerson	1944	Sylvania	1944
ESA	1944	Symphonic	1944
Magnavox	1944	Toshiba	1945

TV/VCR/DVD Combos Controlled by the DVD

Akai	0899	Polaroid	1482
Broksonic	0868	RCA	1132
Diamond Vision	1609	Sharp	0630
Emerson	0821	Superscan	0821
ESA	0821	Sylvania	0821
Funai	1334	Symphonic	0821
Magnavox	0821	Toshiba	1045
Panasonic	1362, 1462		

VCRs

ABS	1972	DirecTV	0739
Admiral	0048, 0209	Durabrand	0039, 0038
Adventura	0000	Dynatech	0000
Aiko	0278	Electrohome	0037
Aiwa	0037, 0000, 0124, 0307, 0468	Electroponic	0037
Akai	0041, 0049, 0053, 0061, 0106, 0175	Emerex	0032
Alienware	1972	Emerson	0037, 0184, 0000, 0121, 0043, 0209, 0002, 0278, 1479, 1278, 0637, 1593, 0593, 0561, 0510, 0479, 0361, 0295, 0294, 0212, 0211, 0208, 0088, 0068, 0061, 0036
America Action	0278	Fisher	0047, 0104, 0054, 0066
American High	0035	Fuji	0035, 0033
Asha	0240	Funai	0000, 0593, 1593
Audiovox	0037, 0278	Garrard	0000
Beaumark	0240	Gateway	1972
Bell & Howell	0104	GE	0060, 0035, 0240, 0065, 0202, 0760, 0761, 0807, 1035, 1060
Broksonic	0184, 0121, 0209, 0002, 0211, 0295, 0361, 0479, 1479, 1815	Go Video	0232, 0279, 0432, 0526, 0643
Calix	0037	GoldStar	0037, 0038, 0018, 1237
Canon	0035, 0102	Gradiente	0000, 0408
Capehart	0020	Grundig	0195
Carver	0081	Harley Davidson	0000
CCE	0072, 0278	Harman/ Kardon	0081, 0038, 0075
Citizen	0037, 0278, 1278	Harwood	0072, 0068
Colt	0072	Headquarter	0046
Craig	0037, 0047, 0240, 0072, 0271	Hewlett Packard	1972
Curtis Mathes	0060, 0035, 0162, 0041, 0760, 1035	HI-Q	0047
Cybernex	0240, 0051	Hitachi	0000, 0042, 0041, 0065, 0082, 0089, 0105, 0166
CyberPower	1972	Howard Comp.	1972
Daewoo	0045, 0278, 0020, 0561, 0637, 1278	HP	1972
Daytron	0020	Hughes Network	0042, 0739
Dell	1972	Humax	0739
Denon	0042	Hush	1972

iBUYPOWER	1972	Quarter	0046
Jensen	0041	Quartz	0046
JVC	0067, 0041, 0008, 0206, 0207, 0384, 1707	Quasar	0035, 0162, 0077, 0454, 1035, 1162
KEC	0037, 0278	RadioShack	0000, 1037
Keen	0693	Radix	0037
Kenwood	0067, 0041, 0038, 0384	Randex	0037
KLH	0072	RCA	0060, 0240, 0042, 0149, 0058, 0065, 0077, 0105, 0106, 0202, 0760, 0761, 0807, 0880, 1035, 1060
Kodak	0035, 0037	Realistic	0035, 0037, 0048, 0047, 0000, 0104, 0046, 0062, 0066
LG	1037	ReplayTV	0614, 0616
Linksys	1972	Ricavision	1972
Lloyd's	0000, 0208	Ricoh	0034
Logik	0072	Runco	0039
LXI	0037	Salora	0075
Magnasonic	0593, 1278	Samsung	0240, 0045, 0051, 0053, 0739, 1014
Magnavox	0035, 0039, 0081, 0000, 0149, 0110, 0563, 0593, 1593, 1781	Samtron	0643
Magnin	0240	Sanky	0048, 0039
Marantz	0035, 0081	Sansui	0000, 0067, 0209, 0041, 0082, 0271, 0479, 1479
Marta	0037	Sanyo	0047, 0240, 0104, 0046, 0159
Matsushita	0035, 0162, 1162	Scott	0184, 0045, 0121, 0043, 0210, 0211, 0212
Media Center PC	1972	Sears	0035, 0037, 0047, 0000, 0042, 0104, 0046, 0054, 0066, 0105, 1237
MEI	0035	Sharp	0048, 0062, 0807, 0848
Memorex	0035, 0162, 0037, 0048, 0039, 0047, 0240, 0000, 0104, 0209, 0046, 0307, 0454, 0479, 1037, 1162, 1237, 1262	Shintom	0072
MGA	0240, 0043, 0061	Shogun	0240, 0051
MGN Technology	0240	Singer	0072
Microsoft	1972	Sonic Blue	0614, 0616
Mind	1972	Sony	0035, 0032, 0033, 0000, 0011, 0034, 0636, 1032, 1232, 1972
Minolta	0042, 0105	Stack 9	1972
Mitsubishi	0067, 0043, 0061, 0075, 0173, 0443, 0807	STS	0042
Motorola	0035, 0048	Sylvania	0035, 0081, 0043, 0000, 0110, 0593, 1593, 1781
MTC	0240, 0048	Symphonic	0000, 0593, 1593
Multitech	0000, 0072	Systemax	1972
NAD	0058	Tagar Systems	1972
NEC	0104, 0067, 0041, 0038, 0040, 0050, 0082	Tatung	0041
Nikko	0037	Teac	0000, 0041
Nikon	0034	Technics	0035, 0162
Niveus Media	1972	Teknika	0035, 0037, 0000, 0052
Noblex	0240	Thomas	0000
Northgate	1972	Tivo	0618, 0636, 0739, 1996
Olympus	0035, 0226	TMK	0240, 0036, 0208
Onkyo	0222	Toshiba	0045, 0043, 0066, 0210, 0212, 0366, 0845, 1008, 1145, 1972, 1996
Optimus	1062, 0162, 0037, 0048, 0104, 0058, 0432, 0454, 0593, 1048, 1162, 1262	Totevision	0037, 0240
Optonica	0062	Touch	1972
Orion	0184, 0209, 0002, 0295, 0479, 1479	Unitech	0240
Panasonic	1062, 0035, 0162, 0077, 0102, 0225, 0226, 0227, 0378, 0454, 0616, 1035, 1162, 1262	Vector	0045
Penney	0035, 0037, 0240, 0042, 0038, 0040, 0054, 1035, 1237	Vector Research	0038, 0040
Pentax	0042, 0065, 0105	Video Concepts	0045, 0040, 0061
Philco	0035	Videomagic	0037
Philips	0035, 0081, 0062, 0110, 0618, 0739, 1081, 1181	Videosonic	0240
Pilot	0037	Viewsonic	1972
Pioneer	0067, 0058	Villain	0000
Polk Audio	0081	Voodoo	1972
Portland	0020	Wards	0060, 0035, 0048, 0047, 0081, 0240, 0000, 0042, 0072, 0149, 0062, 0212, 0760
Presidian	1593	White West.	0209, 0072, 0637
Profitronic	0240	XR-1000	0035, 0000, 0072
Proscan	0060, 0202, 0760, 0761, 1060	Yamaha	0038
Protec	0072	Zenith	0039, 0033, 0000, 0209, 0034, 0479, 0637, 1139, 1479
Pulsar	0039, 0051	ZT Group	1972

2 How To Use This Book

Layout

Instructions are paired with screen shots to illustrate the process and provide confirmation of what you should see on your TV.

Section headings and on-screen text, such as screen titles, messages and options are shown in **Deep Blue Bold Type**.

Buttons on the remote control are represented by a graphic of that button, or **Red Bold Type** when a graphic cannot be shown.

Color-codes & Icons

Program listings may display icons based on settings for a particular program.


Program Attributes


 New Episode (not a re-run)  Program in High Definition

 Autotune  Reminder

 Record*  Series-Record*

 Series Record Episode Skipped*

 Closed Captioned  Dolby Digital Audio

 Favorite  Alert Symbol

 Lock Program  Live TV


 Whole Home DVR (Coming Soon)

****Record and Series Record only appear if your set top box supports recording.***

 All menubar icons and explanations are in **4 Menubar**.

3 Infobar

Infobar Layout

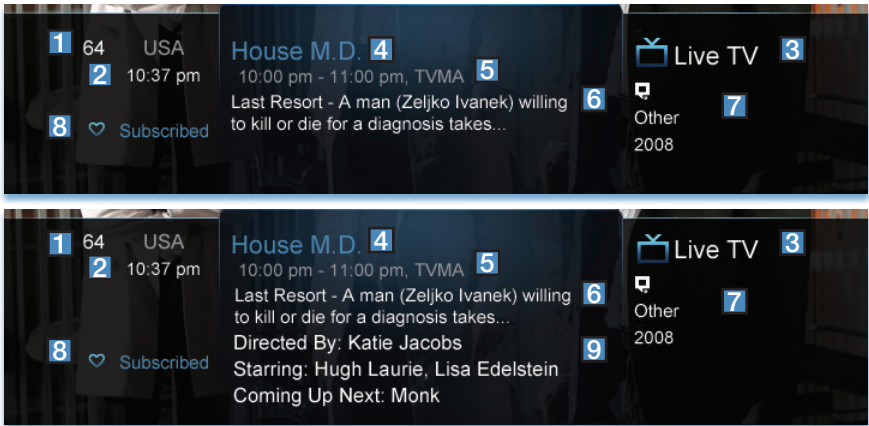

1

Channel Name & Number

The name and number of the channel currently listed in the Infobar.

2

Current Time

3

Program Type

Indicates whether you are watching Live TV, Video on Demand, a recorded program or a Pay-Per-View program. This may also indicate if the program is Blocked/Restricted because of parental controls or that the Emergency Alert System is active.

4

Program Name

5

Program Start Time, End Time & Rating

6

Program Summary

7

Additional Program Information

Indicates the type of program (movie, sports, etc.), Closed Captioning, Dolby Digital audio, and year of original release.

8

Current Favorites List

9

Director, Stars & Coming Up

The detailed Infobar will list the director and stars of a program, along with the name of the next program on this channel.

3 Infobar



Introducing The Infobar

The Infobar is a quick way of finding information about the show you are watching, what comes on later, and what is on other channels.

Go To The Infobar

 
There are three ways to make the basic Infobar appear.

Press **INFO** on your remote control.

Press the **Up** or **Down Arrow Keys** on your remote control.

The basic Infobar will also appear any time you change channels.

Once the Infobar is active, press **INFO** again to display the detailed Infobar. It adds information on directors, actors and the name of the next program.

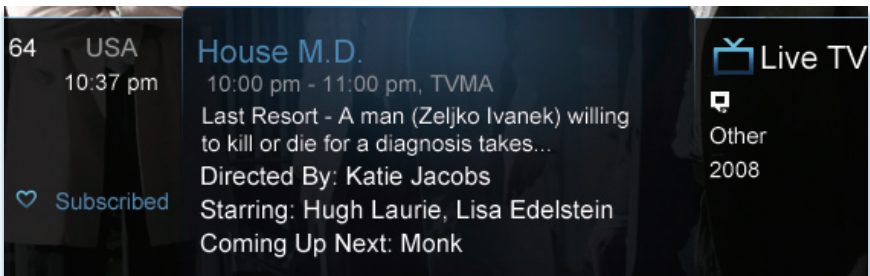

3 Infobar

Using the Infobar

Step 1: Go To The Infobar

 
Press **INFO**, the **Up or Down Arrow Keys**, or change channels.



Step 2a: See What's On Other Channels

Press the **Up or Down Arrow Keys** to scroll the Infobar through what is showing on other channels without actually changing channels.


If you find something you would rather watch on another channel, press **OK** to tune to that channel.

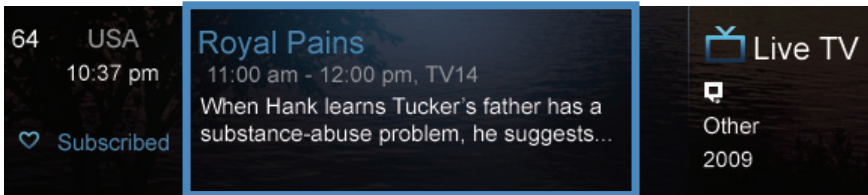

Step 2b: See What's On Later

Press the **Right Arrow Key** to scroll ahead to upcoming programs for the channel listed on the Infobar.

 Press **OK** while viewing info on a future program to bring up these options.

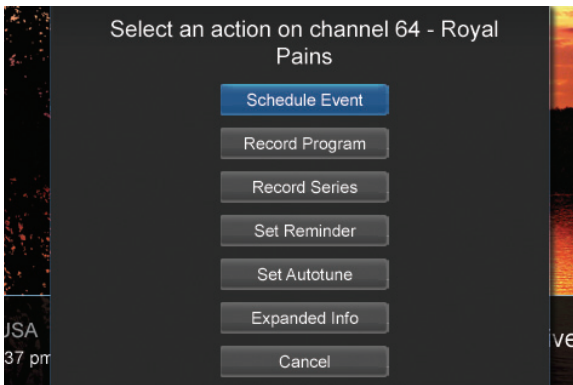

Press the **Left Arrow Key** to scroll back to the current channel listing. To exit the Infobar completely, press **Exit** on your remote.

Note: Recording options will not be available if your set top box doesn't support those features.

4 Menubar

Introducing the Menubar



The Menubar is a quick and easy way to access any feature of your service.

Go To the Menubar

To display the Menubar, press **MENU** on your remote control. Press the **Left/Right Keys** on your remote control to navigate the highlight through the menu. Press **Menu** again to exit or press **Exit** on your remote control.

Understanding the Menubar

Guide



Guide will bring up the program guide. For information on Guide, please see section **5 Guide**. To record or edit a recording, please see section **6 Guide & Record**.

PPV



PPV jumps directly to the Pay Per View channels in the program guide. For information on PPV, please see section **9 Pay Per View**.

DVR



DVR allows you to watch existing recordings, access a list of scheduled recordings, and edit and sort both. You can also create a recording (Schedule Event) and prioritize conflicting series recordings. For information on DVR, see section **8 DVR**.

Rentals



Rentals provides access to rent Video on Demand movies and programs. For information on Rentals, see section **10 Rentals**.

4 Menubar

My Library



My Library provides quick access to previously purchased programs, Reminders you have scheduled, and messages regarding your service. For more information on My Library, see section **11 My Library**.

Control On



Control Off



Controls allow you to temporarily disable or enable all parental controls. For information on parental control functions, see section **12 Controls and 13 Settings**.

Note: The Parental Controls option will only appear if the Parental Controls are configured and the box is checked in Settings.

Settings



Settings offers access to creating parental controls and setting blocked channels, determining how things appear on the screen, and creating, editing and deleting user accounts. For information on **Settings**, see section **13 Settings**.

Sign out



Sign Out allows you to sign out of the current user account. This only appears if you are using the **Enable Login** option under **Settings/Preferences**, have multiple user accounts, and have signed in with a user name and password. For information on user accounts, see **User Settings** in section **13 Settings**.

Favorites



Favorites allows you to choose, edit, create or delete a favorite channel list. For information on Favorites, see section **15 Favorites**.

Search



Search allows you to search program listings or Video on Demand rentals by title or key words. For information on Search, see section **16 Search**.



5 Guide

Guide Layout

Favorites List

 
Indicates the favorite list currently in use.

Info Area

Provides information about the currently highlighted program.

Picture-in-Picture

Allows you to watch TV while you are in Guide.

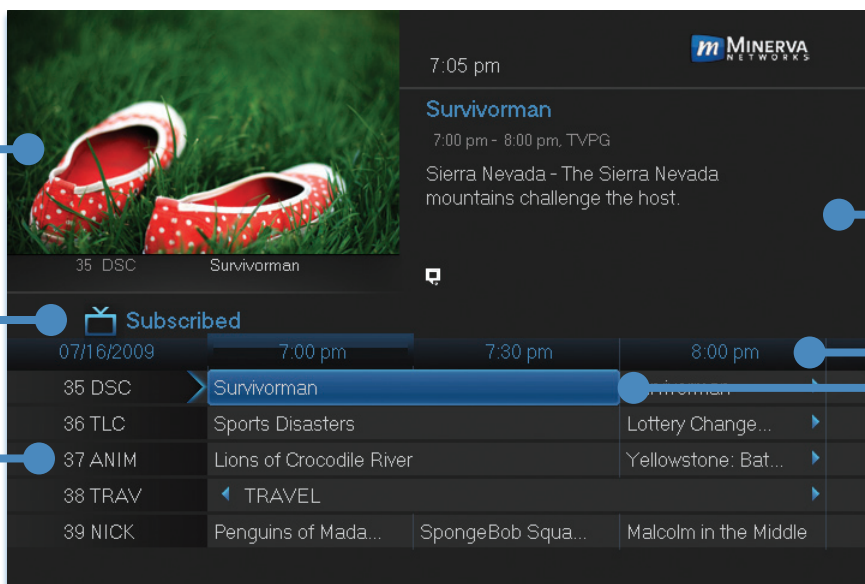

Highlight

Indicates what program listing is currently in focus.

Program Listings

Shows channel number and abbreviation and program listings for each channel. Program listings may include icons to indicate a setting or feature for a particular program.

Listing Date/Time

Shows the date and time (divided into 30-minute increments) for the programs currently shown in Guide.



Introducing Guide

Guide is the place to quickly find out what's on now and what's playing later. You can set Reminders or Recordings for upcoming programs in Guide.

Go To Guide

There are two ways to go to Guide.

Press **GUIDE** or Press **MENU**, scroll to **Guide** icon, and press **OK**.

Getting Around Guide


To navigate Guide...

- Move to a channel by entering the channel with the **Number Pad (0-9)**.
- Use the **Arrow Keys** on the remote to move the highlight through the Guide, channel by channel.
- Press the **Up** or **Down Arrows** to move the highlight to view what programs are currently showing on different channels.
- Press the **Left** or **Right Arrows** to move the highlight to view what future programs will be showing up to 7 days into the future.
- Press **Page Up** or **Page Down** to jump up or down one screen of listings.
- Press **OK** to preview a current highlighted show on the Guide in the upper-left corner of your TV screen. To view the program full screen, press **OK** again.
- Continuing to press the **Guide** key on your remote will switch the **Favorite** list to **All**, **Subscribed**, **HD**, and any **Favorites** lists that you create. This causes guide to only display the channels included on each list. Cycling to **All** will display all available programming.
- Press **EXIT** to leave the Guide.

Favorites List in Guide

A Favorites list allows you to select channels you watch most often, placing them on a list that is quickly accessed in **Guide**. If you can only scroll through a limited number of channels, verify that your Guide is set to All or Subscribed. For more details about creating, editing, or naming a Favorites list, see section **13 Favorites**.

HDTV Programming

Programs available in HD will appear in Guide with a blue **HD** icon  next to the name of the program. In order to watch HD programming, you will need a HDTV-capable set top box and TV, and may need to subscribe to an HD channel package.



6 Guide - Alerts & Recording

Introducing Guide & Recording

In this section, you will learn about setting or scheduling a recording, recording a series, and editing it. You will view the recordings under the DVR icon.

A Reminder informs you a program is about to come on. An Autotune automatically changes the channel when the program is about to start. A Recording will automatically record the program to your set top box. On the **Schedule Event** screen, you can edit the channel number, time, type of timer (**Recording**, **Reminder**, or **Autotune**), and frequency of the event. See **7 Recording** and **8 DVR** for more details on **Schedule Event**.

Setting a Reminder, Autotune or Recording

The screenshot shows the Minerva TV Guide interface. At the top, it displays '7:06 pm' and the 'MINERVA' logo. Below this, a large image of red polka-dot shoes is shown. To the right of the image, the program 'LA Ink' is listed with the time 'New 10:00 pm - 11:00 pm, TVPG'. A description follows: 'Stranger In My Shop - Kat's growing business forces her to go against her policy of only hiring people she knows. She brings in a new tattoo artist named Amy to see if...'. Below the image, it says '35 DSC' and 'Survivorman'. A 'Subscribed' icon is visible. At the bottom, a table lists various channels and their current programs:

Channel	9:30 pm	10:00 pm	10:30 pm
35 DSC	Are We Alone?		
36 TLC	LA Ink	LA Ink	
37 ANIM	Yellowstone: Ba...	Animal Cops: Philadelphia	
38 TRAV	TRAVEL	TRAVEL	
39 NICK	George Lopez	Family Matters	Family Matters

Step 1: Pick a Program

Find the future program you want. Highlight its listing and press **OK**. A pop-up menu will appear.

Note: The pop-up may appear different depending if your STB is DVR-enabled, or what type of program you selected to record.

Step 2: Set the Reminder, Autotune or Record

Highlight and Record Program, Set Autotune, or Set Reminder and press **OK**. You will then be returned to Guide.

The screenshot shows a menu titled 'What would you like to do with the selected program LA Ink'. It contains four buttons: 'Schedule Event', 'Record Program', 'Record Series', and 'Set Reminder'.

See **7 Recording - Quick Recording** for how to record a currently playing program.



Subscribed		
07/16/2009	9:30 pm	10:00 pm
36 TLC	LA Ink	LA Ink
37 ANIM	Yellowstone: Ba...	Animal Cops: Philadelphi
38 TRAV	TRAVEL	TRAVEL
39 NICK	George Lopez	Family Matters
40 TVL	She's Got t...	She's Got the Look

 
Step 3: Return to Guide

The program listing now shows an icon.

Reminder set


Autotune set

Recording set

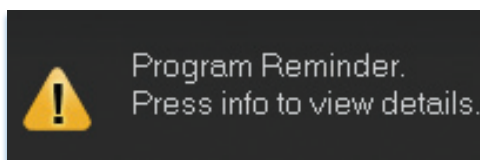


Step 4a: Your Reminder

 A few minutes before your program comes on, a box will appear on your screen telling you that you have a Reminder.

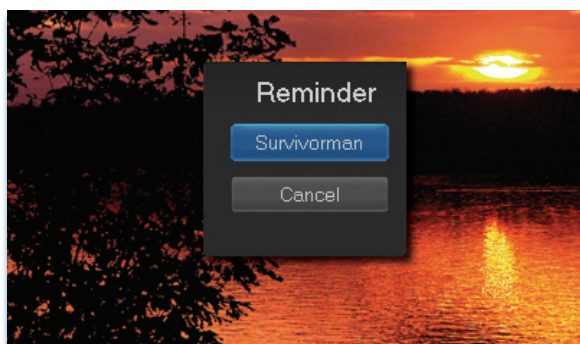

Press **INFO** to display the Reminder.

 Highlight the button showing the program name and press **OK** to watch the program. Highlight **Cancel** and press **OK** to ignore the Reminder.

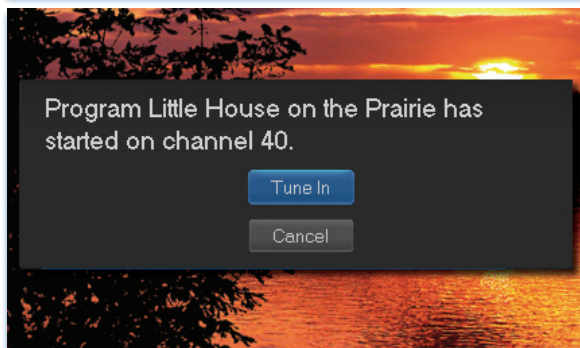

Step 4b: Your Autotune

Just before the program begins, a message will display, giving you the option to tune in or cancel.



6 Guide - Alerts & Recording

Step 4c: Your Recording

If you set a future recording, your set top box will record it for you once your program begins (see [7 Recordings](#) for more details).

To watch your recording, go to [8 DVR - Recorded Programs](#).

Editing a Recording

Note: Recording is not available if your set top box doesn't support it.

Once you have created a recording, you can adjust when the recording begins or ends. This ensures nothing is missed in case the broadcaster's time doesn't precisely match up with yours.

Subscribed			
07/16/2009	9:30 pm	10:00 pm	10:30 pm
36 TLC	LA Ink	LA Ink	
37 ANIM	Yellowstone: Ba...	Animal Cops: Philadelphia	
38 TRAV	TRAVEL	TRAVEL	
39 NICK	George Lopez	Family Matters	Family Matters
40 TVL	She's Got t...	She's Got the Look	

Step 1: Pick an Upcoming Recording

Locate the program to be recorded. Highlight its listing and press

OK.

What would you like to do with the selected program LA Ink

Edit Recording

Cancel Recording

Step 2: Edit Recording

From the options shown for this program, highlight **Edit Recording** and press **OK.**

LA Ink

7:00 pm - 8:00 pm

Start 0 Minutes Early

End 0 Minutes Late

OK Cancel

Step 3: Pad Start & End Times

 
Arrow Up or **Down** to choose **Start** or **End** and press **OK.** Once you see arrows above and below the **Start** or **End** box, **Arrow Up** or **Down** to adjust the **Start** or **End** time.



Setting a Series Recording

Note: Recording is not available if your set top box doesn't support it.

If you choose to record a program that is part of a regular series, you will be offered the option to record the series. This allows you to record every episode of a favorite program.

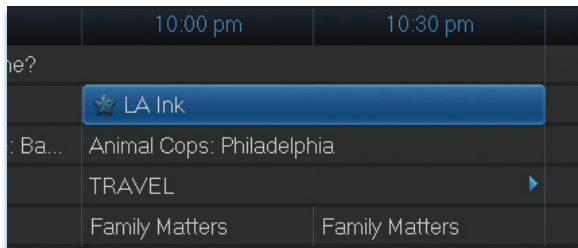

Step 1: Pick a Program

Find any episode of the series you want to record. Highlight the program listing and press **OK**.

 


Step 2: Set the Recording

Highlight **Record Series** and press **OK**.

Step 3: Return To Guide

Once you have set the series recording you will be returned to Guide.

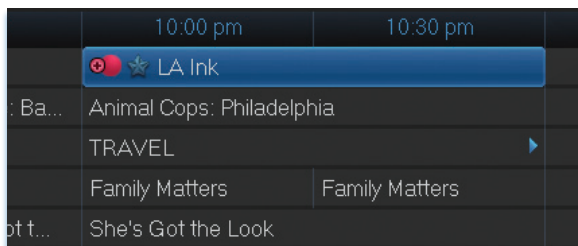

The program listing now shows an icon next to the program's name.

 Series Recording set

Every upcoming episode of the series will be recorded.

 


6 Guide - Alerts & Recording

Editing a Series Recording


Note: Recording is not available if your set top box doesn't support it.

Once you have created a series recording, you can adjust which episodes of the series are recorded and which are skipped.

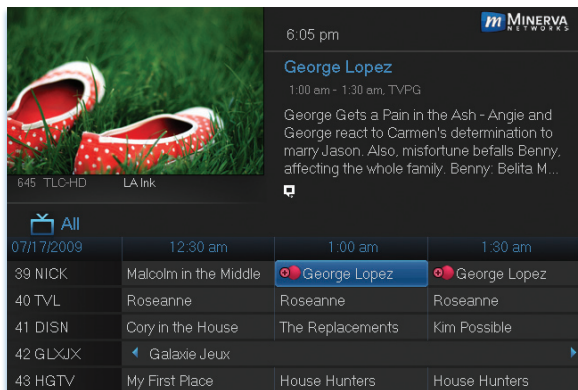


Step 1: Pick a Series Recording

 Locate any program in the series to be recorded. Highlight its listing and press **OK**.

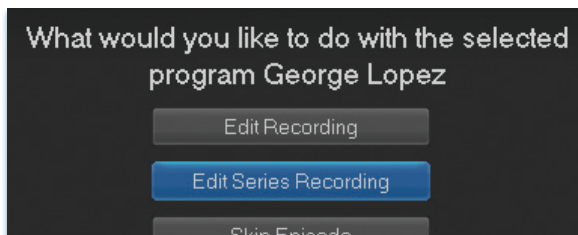

Step 2: Edit Series Recording

 From the options shown for this program, highlight **Edit Series Recording** and press **OK**.

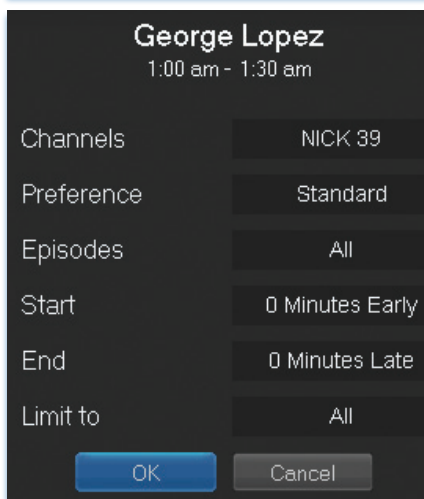

Step 3: Adjust Series Recording Options

Arrow Up or **Down** to choose an option and press **OK**. Once you see arrows above and below the options setting box, **Arrow Up** or **Down** to adjust that setting.



Channels determines whether the series is recorded when aired on the channel originally set to record, or record the series on whatever channel airs it.

Preference determines whether to record the program when shown in standard definition or only when shown in high definition.

Episodes determines whether to record re-runs and new episodes of the series or only new episodes.

 
Start and **End** determines how much time to add at the start and end time of the recording so that none of the program is missed.

Limit To determines how many episodes of the series are saved. If set to anything other than all, the system will delete the oldest recorded episode of the series once the limit is reached.

Once you have adjusted the series settings, highlight **OK** and press **OK** to save your changes.

Skipping an Episode

Once you have created a series recording, you can manually skip any episode.

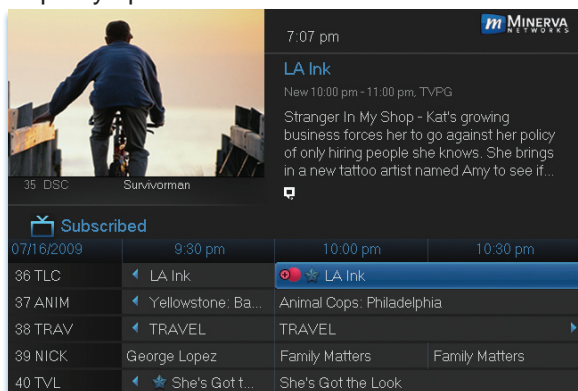

Step 1: Pick the Episode

Locate the episode in the series you want to skip. Highlight its listing and press **OK**.

Step 2: Skip the Episode

Highlight **Skip Episode**

Skip Episode

 
and press **OK**. You will be returned to Guide and the red dots on the episode listing will turn grey **+** to indicate you are skipping that episode. If you decide to record this episode after all, repeat this procedure and choose **Record Episode** from the options shown and press **OK**. The dots will become red again.



6 Guide - Alerts & Recording


Cancelling an Autotune, Reminder, Recording or Series Recording

You can cancel any event you have previously scheduled directly from Guide.

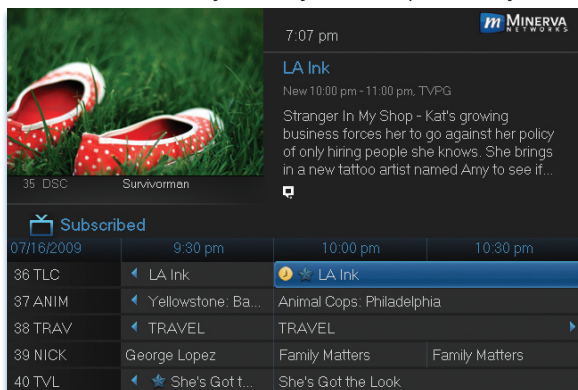

Step 1: Pick the Program

 Highlight the program with the event you want to cancel and press **OK**.

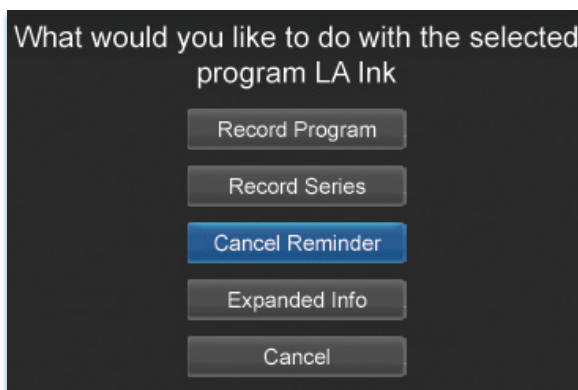

Step 2: Cancel the Event

Depending on the type of event you are cancelling, your option will be

Cancel Reminder

Cancel Autotune

Cancel Recording

or

Cancel Series

Highlight the option you want and press **OK**.

Step 3: Return to Guide

After you press **OK**, you will return to the Guide.

Additional Information on Cancelling Events

A list of your reminders and autotunes is located in **11 My Library - Reminders** and can be cancelled from there.

To cancel scheduled recordings, see **8 DVR - To Record**.

7 Recording

Recordings

 
Creating recordings and pausing live TV both require a DVR (Digital Video Recorder). There are several ways to record besides those covered in [6 Guide - Alerts & Recording](#). They are listed here.

Quick Recording

The fastest and easiest way to begin recording is to use the **RECORD** button on your remote control.

Step 1: Start Recording

While watching a program, press **RECORD**. Recording will begin immediately.

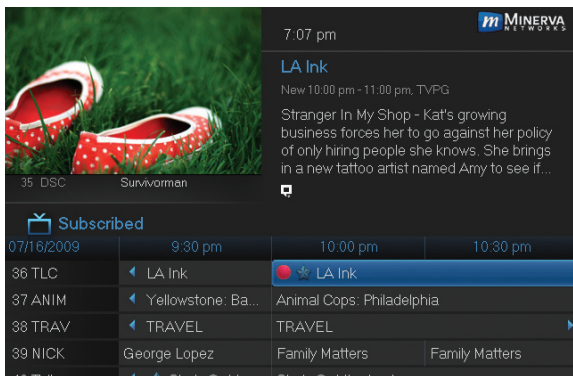

You can also start a quick record in Guide.

Highlight a program you want to record using the **Arrow Keys** and press **RECORD**.

If the program is currently on, recording will begin immediately. The program will be recorded until it is scheduled to finish.

To manually stop the recording before it is finished, press **STOP**. If the program comes on in the future, your system will record the program for you automatically.

General Guidelines About Recordings

Your TV can even be turned off and recording will take place.

You can record one program and watch a different program simultaneously.

Check with your service provider to see additional multiple recording options.

Pausing Live TV (PLT)

Recording capability also allows you to pause live TV (PLT). While watching a channel, PLT will temporarily store what you have watched so you can pause a program and then press play to resume watching.

7 Recording

Controlling Live TV

While watching a recorded program or live TV, you can use the **Playback Control Buttons** to control playback.

|| Press **PAUSE** on your remote control to pause the program. Programs can be paused as long as the current channel is not changed.

▶ Press **PLAY** to resume watching.

◀▶ Press **REWIND** or **FAST FORWARD** to reverse or advance playback from the current point. Press repeatedly to increase **FAST FORWARD** or **REWIND** speed.

■ Press **STOP** to exit playback of the program.



 
The PLT bar appears whenever you pause, rewind or fast forward live TV.

The center area indicates the amount of TV saved. The “I-bar” shows where you are within that range.

The far left box indicates the current playback function.

The far right box indicates the current time.

DVR Playback Controller

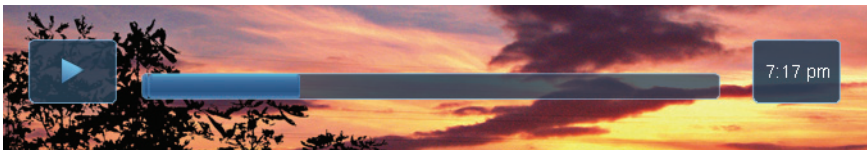

Any time you press one of the **Playback Control Buttons** while watching a previously recorded program, the DVR playback controller is displayed.

The box to the left indicates the playback function in use.

 
The bar in the middle gives a visual representation of where you are in the recording. The lighter section indicates how much of the recording has been played.

7 Recording

Schedule Event

With **Schedule Event**, you can select the channel, date, start and stop time, duration, and frequency of a recording. It is helpful when you want to record or watch a portion of a program on a reoccurring basis.

Accessing the Schedule Event Screen

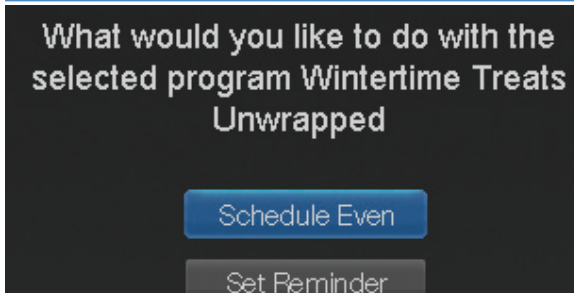

There are two ways to access the screen.

Option 1:


When you select a future program in **Guide** and press **OK**, select the **Scheduled Event** option from the pop-up menu.

The **Schedule Event** screen is populated from the channel you were watching and will change when you select a future program in the Guide.

Option 2:

Press **MENU** on your remote control, navigate to **DVR**, then scroll down to **Schedule Event**, and press **OK**.

 
Configuring the Schedule Event Screen

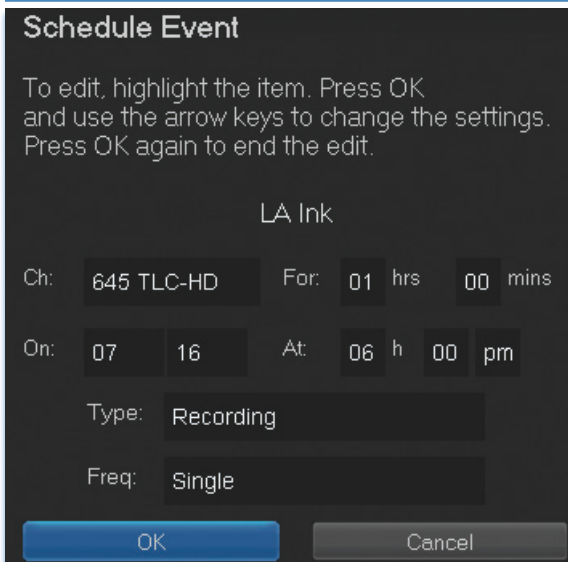

The information (the date, program name, channel, time and frequency of recording) is listed on the **Scheduled Event** screen.)

If information is incorrect, highlight it and press **OK**. **Arrow Up** and **Down** on your remote to enter the correct information and press **OK**.

 
7 Recording

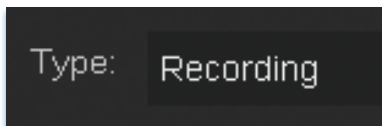

Set Type of Event

Arrow Down and highlight **Type** and press **OK**. The highlight will become left/right arrows.

 Arrow Left or **Right** until you see the event type you want (**Recording**, **Autotune**, **Reminder**), then press **OK**.

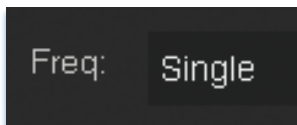

Set Event Frequency

Arrow Down on your remote and highlight **Freq** and press **OK**. The highlight will become left/right arrows.

Arrow Left or **Right** on your remote until you see the frequency you want (**Single**, **Weekly**, **M-F**, **Every Day**), then press **OK**.

Arrow Down on your remote and highlight **OK** on the **Schedule Event** screen and press **OK** on your remote. You will be returned to **DVR** menu and press **Exit** to return to the Guide.

See **8 DVR - Schedule Event** for details on editing the **Schedule Event** screen.

Record By Search

Navigate to the Menubar by pressing the **Menu** button, highlighting the **Search** icon, and press **OK**. (See **16 Search** for complete details on **Search**.)

Once the Search topic is found, navigate to the program you want to record. Then highlight it and press **OK**.

Arrow Down to **Record Program** for a one-time recording and press **OK**. Or **Arrow Down** and highlight **Record Series** to record all episodes of the show.

See **16 Search** for more details.

Note: To view your recordings, go to **8 DVR - Recorded Programs**.

Introducing DVR

In DVR, you can view current recordings, see a list of future scheduled recordings, edit and cancel recordings, sort and prioritize recordings, lock recordings, and schedule a future event. Schedule Event is the only DVR feature that enables recordings.

Go To DVR

Press **MENU**, highlight **DVR** and press **OK**.

The DVR Menu Quick Reference

Recorded Programs

Recorded Programs lists programs you have already recorded. Go here to watch, sort, lock or delete these recorded programs. **VIEW RECORDINGS**

To Record

To Record lists all Recording events you have scheduled, and allows you to sort, or cancel any future recording events. **VIEW FUTURE RECORDINGS**

Schedule Priority

Schedule Priority allows you to give priority for one series recording over another in the event of a scheduling conflict.

 
Schedule Event

Schedule Event allows you to create a Recording, Reminder or Autotune event for individual or recurring programs.

Record History

Record History is a log of when recordings start, complete or are cancelled.

Recorded Programs

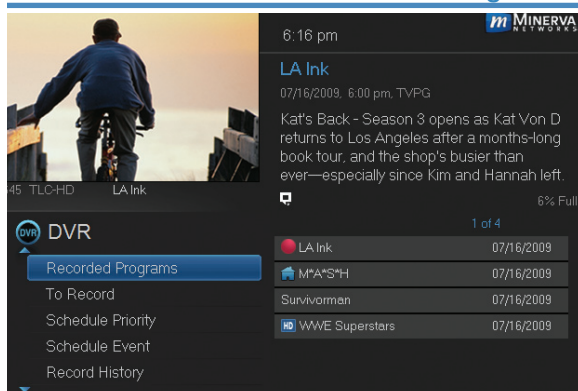


Highlight **Recorded Programs** and press **OK**.

A list of your recorded programs appears to the right.



8 DVR

Recordings not yet watched are listed with white text; those you have are listed with grey text. If a program is still being recorded a red dot icon will appear to the left of the program's name.

 
The Whole Home icon  (coming soon) means that the recorded program can be viewed from any set top box in the house and will appear to the left of the program's name. (See the end of this DVR section for more details about Whole Home DVR.)

In the lower right of the info area a percentage full item is shown. This indicates the percentage of total recording space used.

Recorded Programs: Watching a Recorded Program

Step 1: Pick a Recording

Highlight the recording you want to watch and press **OK**.

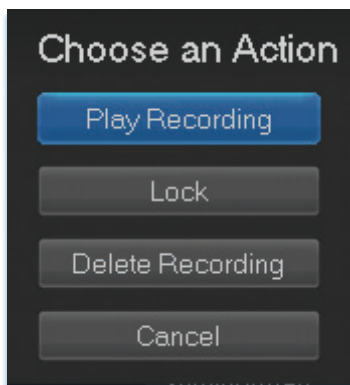

Step 2: Play the Recording

 
Highlight **Play Recording** and press **OK**.

Step 3: Watch the Recording

You will exit to your recording as it begins playing. The Infobar will appear for a few seconds with a green icon to the right to indicate you are playing a recording.

While watching your recording, you can use any of the **Playback Control Buttons** on your remote just as you would if watching a videotape or DVD.

DVR Playback Controller

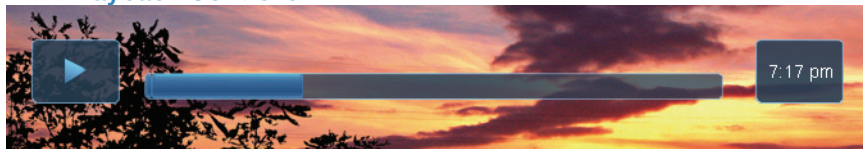

Any time you press one of the **Playback Control Buttons** while watching a previously recorded program, the DVR playback controller is displayed.

The box to the left indicates the playback function in use.

The bar in the middle gives a visual representation of where you are in the recording. The lighter section indicates how much of the recording has been played.



 
Step 4: Return To Live TV

When the recording ends, you will be returned to live TV.

If you want to return to live TV before your recording has ended, press **STOP (■)**. See **Playback Controls** on your remote.

Recorded Programs: Sorting Recordings

Highlight **Recorded Programs** and press **OK** to bring up your recording list. The first listing will be highlighted. You can sort your recordings alphabetically by title, by the date recorded, by channel that originally aired the program, or by whether you have or have not viewed the recording.

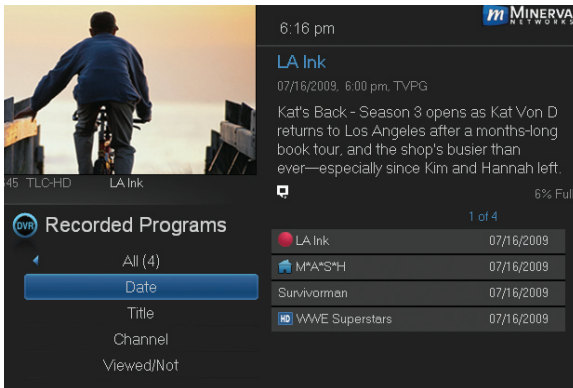

To sort your recordings by any of those categories, press the **Left Arrow Key** to shift the highlight to the left. Highlight the category you want to use to sort and press **OK**.

For example, if you highlight **Date** and press **OK**, your

recordings will be sorted by the date recorded with oldest at the top and newest at the bottom.

You can reverse the sort order for any category by pressing **OK** again on that category. Using the above example, pressing **OK** again on **Date** would put your newest recordings at the top and oldest at the bottom.

Recorded Programs: Locking or Unlocking a Recording

Locking a recording prevents the system from deleting a program to make space for new recordings.

 
Note: You can still manually delete a locked recording. Locking only prevents the system from automatically deleting it.

Step 1: Pick a Recording

Highlight the recording you want to lock and press **OK**.




8 DVR

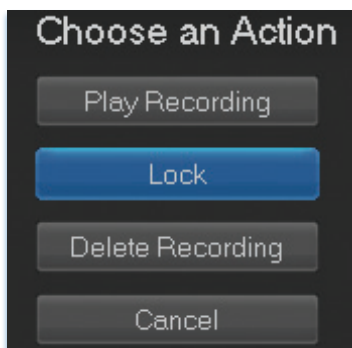

Step 2a: Lock the Recording

Highlight **Lock** and press **OK**.

Once a program is locked, a  appears on the recording's listing.

Step 2b: Unlock the Recording

If you select a locked program in Step 1, the Lock option will instead be Unlock.

 
Highlight **Unlock** and press **OK**.

When the program is unlocked, the padlock icon is removed.

Recorded Programs: Deleting a Recording

Step 1: Pick a Recording

Highlight the recording you want to delete and press **OK**.

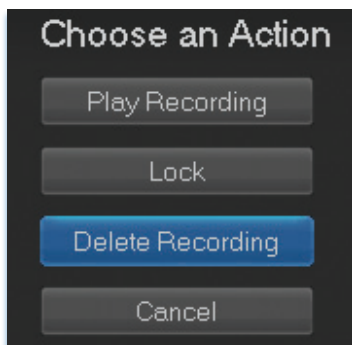

Step 2: Delete the Recording

Highlight **Delete Recording** and press **OK**.

Step 3: Confirm Delete

Highlight **Yes** and press **OK** to confirm, or **No** if you change your mind.

Step 4: Recording Deleted

Once you confirm the deletion, the entry for that recording is removed from the list.

Note: *Once a recording has been deleted, there is no way to get it back.*

Recorded Programs: Stopping a Program Currently Recording

Step 1: Pick a Recording

Highlight the recording event you want to stop and press **OK**.

Step 2: Stop the Recording

Highlight **Stop Recording** and press **OK**.

To Record

You can easily review and cancel programs to be recorded. Highlight **To Record** and press **OK**.



To Record: Sort Future Recordings

A list of your scheduled future recordings will appear to the right.

The list of programs to be recorded can be sorted by title, date to be recorded, channel airing the program to be recorded, or recordings to be skipped or not.

For more information on sorting items in this list, see Sort Recordings earlier in this section.

To Record: Cancelling a Future Scheduled Recording

Step 1: Pick a Future Scheduled Recording

Highlight the recording event you want to cancel and press **OK**.

Step 2: Cancel the Recording Event

Highlight **Cancel Recording** and press **OK**.

 
Step 3: Recording Cancelled

Once you have cancelled the recording event, the entry for that recording event is removed from the list.

Schedule Priority

When you create series recordings for different programs that may be scheduled for the same time, Schedule Priority allows you to pre-determine which program you want to be recorded instead of another. To go to Schedule Priority, highlight **Schedule Priority** and press **OK**.

Schedule Priority: Changing Schedule Priority

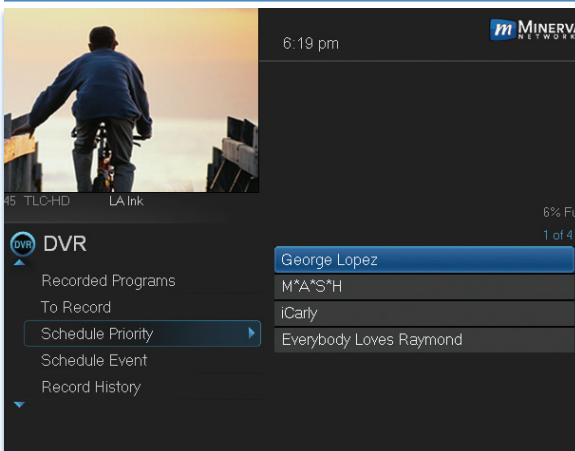

Schedule Priority lists all series recordings with the highest priority listed first.

This program will always be recorded in preference to any other series recording.

To adjust the priority for a series, highlight the program you want to change and press **OK**.

You can **Move Up** or **Move Down** the

program in priority. Highlight the option you want and press **OK**. If necessary, repeat this procedure until each series is in the order of priority you want.



8 DVR

Schedule Event

Highlight **Schedule Event** and press **OK**. Setting a Schedule Event is covered in **7 Recordings**. Editing instructions are covered here.

Schedule Event: Editing a Scheduled Event

Schedule Event

To edit, highlight the item. Press OK and use the arrow keys to change the settings. Press OK again to end the edit.

LA Ink

Ch: 645 TLC-HD For: 01 hrs 00 mins

On: 07 16 At: 06 h 00 pm

Type: Recording

Freq: Single

OK Cancel

You can edit the channel number, date, time, and type of timer and frequency of the event.

Highlight the setting you want to change by **Arrowing** to the item and press **OK**. Use the **Right and Left Arrow Keys** to change the settings and press **OK** on the remote to end the edit.

When all screens are completed, press **OK** on the screen to enter your information.

Record History

Record History is a log of all events related to your recordings such as recording started, recording completed or recording cancelled. Scroll down the **DVR** listings and highlight **Record History** and press **OK**.

Record History: Reviewing Record History

6:21 pm

LA Ink

07/16/2009 6:02 pm

Recording Started

45 TLC-HD LA Ink

6% Full 1 of 12

DVR

- Recorded Programs
- To Record
- Schedule Priority
- Schedule Event
- Record History**

Rec Start: LA Ink

Recording Skipped: M*A*S*H

Rec Stop: M*A*S*H

Rec Start: M*A*S*H

Recording Skipped: Everybody L...

 
Press the **Up and Down Arrow Keys** on the remote to scroll through your record history.

When you **Arrow** to a Recording that is labeled **Record Stop** and push **OK** on your remote, the date and start time of the recording appears above. The same process works for **Record Start**.

Whole Home DVR (Coming Soon)

As the name suggests, with Whole Home DVR all set top boxes in the household can record programs and view live or pre-recorded shows from any room in the house. You can also stop a recorded program in one room and continue watching it in another.

Set a Recording

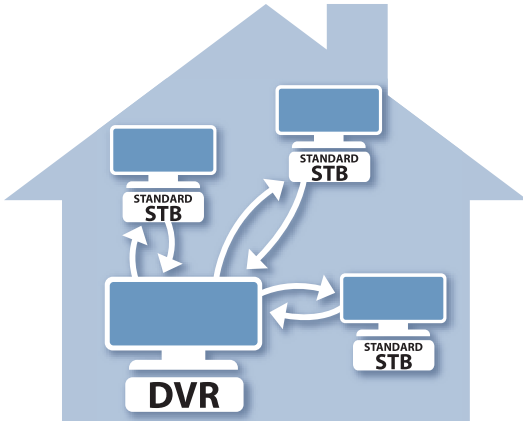

You can set a recording from all set top boxes in the household, not just the DVR. Of course, you need one DVR in the household because it actually does the recording functions for all the non-DVR set top boxes. (See [6 Guide & Recording](#) and [7 Recording](#) for more details about recording.)

You cannot control Pause Live TV from a non-DVR set top box.

Non-DVR Set Top Box Recordings List

6:16 pm

LA Ink

07/16/2009, 6:00 pm, TVPG

Kat's Back - Season 3 opens as Kat Von D returns to Los Angeles after a months-long book tour, and the shop's busier than ever—especially since Kim and Hannah left.

45 TLC-HD LA Ink 6% Full

Recorded Programs

All (4)

Date

Title

Channel

Viewed/Not

Program	Date
LA Ink	07/16/2009
M*A*S*H	07/16/2009
Survivorman	07/16/2009

 
To view the list of Whole Home DVR recordings go to the Menubar, select the **DVR** icon and press **OK** on your remote. **Recorded Programs** appears as the first listing under **DVR**. Select it and press **OK** to bring up the list. When viewing the list of Whole Home DVR

recordings on a non-DVR set top box, the Whole Home icon will appear next to the program's name. All set top boxes (including the DVR) will have access to the recording.


Watching from Room to Room

Stop program in
family room

Continue watching
in bedroom



DVR

 

**STANDARD
STB**

If you start watching a recorded program in one room (family), and wish to move to another room (bedroom) you can view the recording there.

Step 1: Stop the recording playing in the family room by pushing the **stop button** on your remote. (See the **Playback Controls** on your remote).

A screen will appear giving you a choice to either **Keep this Recording** (highlighted) or **Delete this Recording**. Click **OK** on the highlighted **Keep this Recording**. You will then be returned to the **DVR** screen and the video will now be available in other rooms.

Playback has ended.
Would you like to delete this recording?

Keep this Recording

Delete this Recording

Choose an Action

Play Recording

Resume Play

Lock

Delete Recording

Cancel

Step 2: Go to the bedroom's TV, turn it on, bring up the Menubar and scroll to **DVR**. The first heading under **DVR** is **Recorded Programs**.

Arrow over to the recording you had been watching, and push **OK**. A screen will appear giving you the choices of **Play Recording**, **Resume Play**, **Lock**, **Delete Recording**, and **Cancel**.

Scroll to **Resume Play** and press **OK** on the remote to resume watching the video.

Introducing Pay Per View (PPV)

Pay Per View allows you to watch exclusive sporting events and other content in the comfort and privacy of your home. Forget long lines, big crowds, expensive concessions and seats in the “nose bleed” section.

Go To Pay Per View

Using the **Arrow Keys** on your remote, scroll the menubar to **PPV**, then press **Ok**. The PPV list will appear on the Guide menu.

Buying Pay Per View



6:12 pm

John Doe Goes to Jail
6:00 pm - 8:00 pm, PG-13 \$3.99

Writer-director and star John Doe returns to the big screen in this hilarious romp, as his pistol-packin' grandmomma alter ego turns the big house upside down when she is se...

645 TLC-HD LA Ink


PPV

07/16/2009	6:00 pm	6:30 pm	7:00 pm
80 PPV4	Tomorrows Child		
81 PPV5	Love Me or Not		
82 PPV6	Rein of Terror		
83 NCAR27	Nascar Finals		
84 PPV7	John Doe Goes to Jail		

Note: Use these steps to purchase Pay Per Events, Pay Per Block, and Sports Packages.

Step 1: Pick the Program

Highlight the Pay Per View program you want to buy in **Guide** and press **OK**.

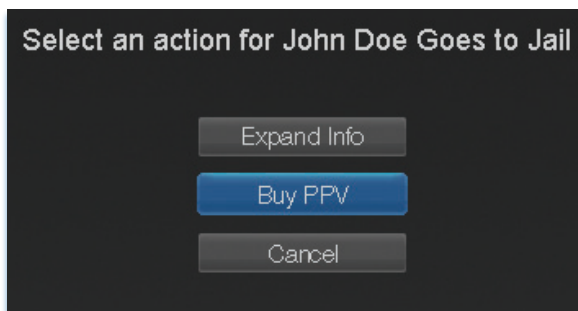

Select an action for John Doe Goes to Jail

Expand Info

Buy PPV


Cancel

Step 2: Buy PPV
Highlight **Buy PPV** and press **OK**.

9 Pay Per View

Step 3: Confirm Your Purchase

Highlight the box next to **Enter PIN** and enter your Pay Per View PIN using the **Number Pad (0-9)**. For more information on PINs, see section **13 Settings**.

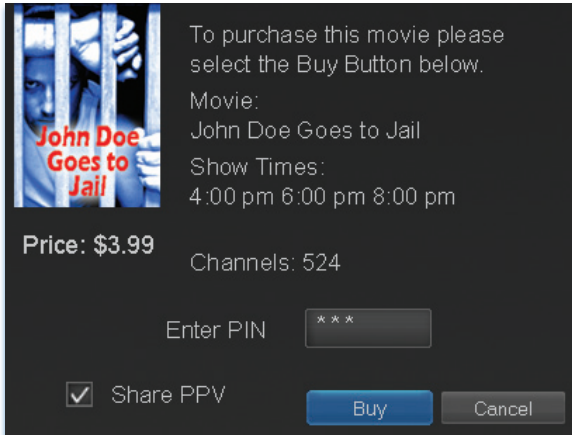

To purchase this movie please select the Buy Button below.

Movie: John Doe Goes to Jail

Show Times: 4:00 pm 6:00 pm 8:00 pm

Price: \$3.99 Channels: 524

Enter PIN

☒ Share PPV

Buy **Cancel**

To share this video with other viewers on your system, highlight the checkbox next to **Share PPV** and press **OK**.

For more information on **Share PPV**, see section **13 Settings**.

Finally, highlight the **Buy** button and press **OK**.

Step 4: Watch Your Pay Per View



6:12 pm **m MINERVA NETWORKS**

John Doe Goes to Jail

6:00 pm - 8:00 pm, PG-13 \$3.99

Writer-director and star John Doe returns to the big screen in this hilarious romp, as his pistol-packing' grandmomma alter ego turns the big house upside down when she is se...

645 TLC-HD LA Ink

PPV

07/16/2009	6:00 pm	6:30 pm	7:00 pm
80 NCAR23	◀ -No Title- ▶		
81 NCAR23	◀ -No Title- ▶		
82 NCAR24	◀ -No Title- ▶		
83 NCAR27	◀ -No Title- ▶		
84 VC7ALL	John Doe Goes to Jail ▶		

You can now watch your pay per view program.

If you purchased your pay per view program in advance, you can schedule an Autotune or Reminder so that you don't miss it.

For more information on setting Reminders and Autotunes, see **Setting a Reminder, Autotune or Recording** earlier in **6 Guide & Recordings**.



Introducing Rentals & VOD (Video on Demand)

Rentals provides access to VOD (Video on Demand) movies and programs. It's like renting from the local video rental store, only better. You can choose from the most recent movies and older favorites, along with favorite TV shows, music videos and local programming.

 
Unlike pay per view which only allows you to watch the program once at the scheduled time, VOD allows you to determine what and when you want to watch, and how often during the rental period. You can even pause, rewind or fast forward just like a videotape or DVD. Rental prices are comparable to prices at your local video store, and some programs may even be free!

Go To Rentals

Press **MENU**, highlight **Rentals** and press **OK**.

Browsing Rentals

VOD Rentals are grouped into categories and sub-categories for convenience.

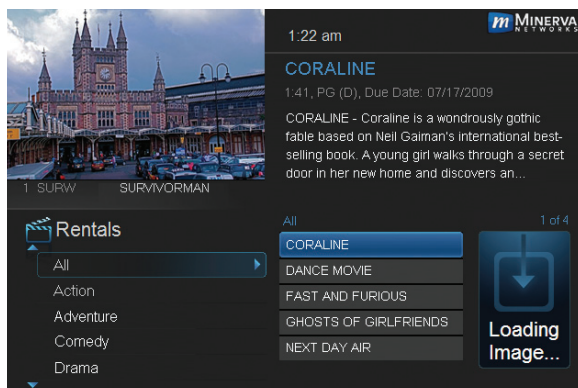

Step 1: Pick a Category

The bottom left of your screen lists the main Rental categories.

Highlight a main category and press **OK**.

Step 2: Browse the Rentals

When you choose a category, a list of available VOD Rentals for that category are shown to the right.

Highlighting a VOD Rental will list information for that Rental in the upper right portion of the screen.

At any time during this process, you can press the **Left Arrow** key to return to a previous set of categories.



 
10 Rentals

Renting a VOD Rental




Step 1: Pick a Rental

Select your VOD rental choice and press **OK**.

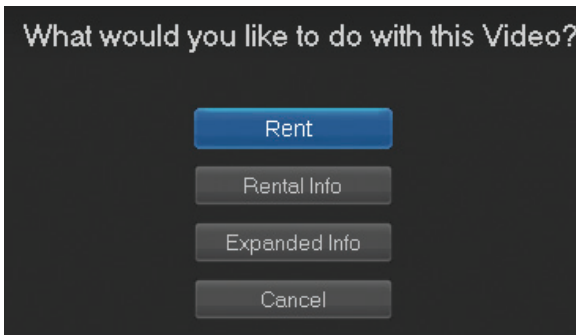

Step 2: Rent

 Highlight **Rent** and press **OK**.

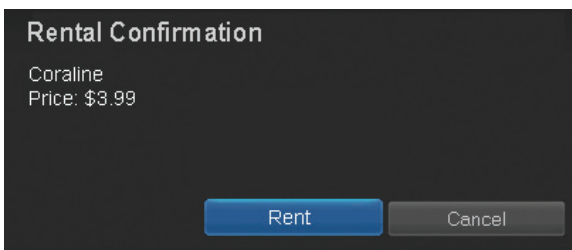

Step 3: Confirm Your Rental

The confirmation screen appears.

If you want other users to be able to watch this VOD Rental, highlight the **Share**

Rental check box and press **OK**.

 
Now highlight the text box next to **Enter PIN** and use the **Number Pad** to enter your PIN, then highlight **Rent** and press **OK** to confirm your VOD Rental.



Watching Your VOD Rental


You can play your VOD Rental from Rentals or from My Library.

Note: For information on the My Library, see section **11 My Library**.

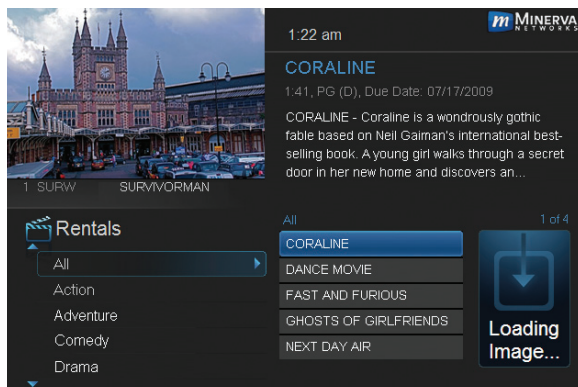

Step 1: Pick Your Rental

 Highlight your VOD Rental and press **OK**.

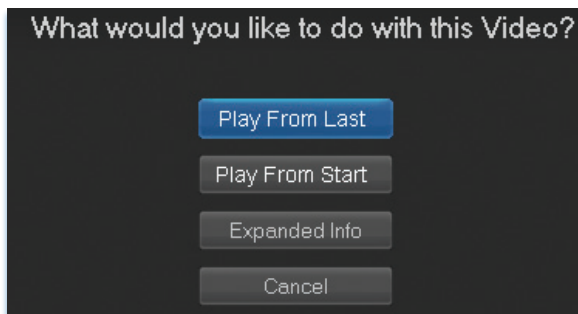

Step 2: Play Your Rental

Highlight **Play From Start** and press **OK** to start play at the beginning of the program.

If you have already watched part of the program and want to pick up where you left off, highlight **Play From Last** and press **OK**.

Controlling Rental Playback

While watching a VOD Rental, you can use the **Playback Control Buttons** on your remote to pause, rewind, fast forward or stop playback.



Press **PAUSE** to halt playback at the current point.



Press **REWIND** or **FAST FORWARD** to reverse or advance playback from the current point.



Press **PLAY** to resume watching at normal speed.



Press **STOP** to exit playback of the program.



10 Rentals

The Slider



Any time you press one of the **Playback Control Buttons** while watching a previously recorded program, the DVR playback controller is displayed.

The box to the left indicates the playback function in use.

The bar in the middle gives a visual

representation of where you are in the recording. The filled-in portion of the progress bar indicates how much of the recording has been played.



Introducing My Library

My Library stores all purchased programming, a list of your scheduled Reminder and Autotune events, and messages about your service.

The My Library Menu

Video

Video provides access to your VOD Rentals you have purchased from Rentals.

PPV Events

PPV Events allows you to view a previously purchased concert, sporting or other pay per view event.

Pay Per Block

Pay Per Block allows you to view purchased pay per view programming in blocks of time rather than for an entire program.

Sports Packages

Sports Package allows you to access all programming for any seasonal sports subscription package you have purchased.

Reminders

Reminders lists all Reminder and Autotune events you have created. From here, you can cancel a Reminder or Autotune.

Messages

Messages allows you to view any messages about your service. Messages may inform you of promotional offers, upcoming Video on Demand events, service upgrades or billing alerts.

Go To My Library

Press **MENU** on your remote control, highlight **My Library** and press **OK**.

Go To Rented Videos

 
VOD rental times can range from 24 hrs to several days. To view and play your VOD during that rental time, highlight **Video** and press **OK**.

A list of your purchased VOD Rentals appears to the right.




11 My Library

Watching a Rental Video

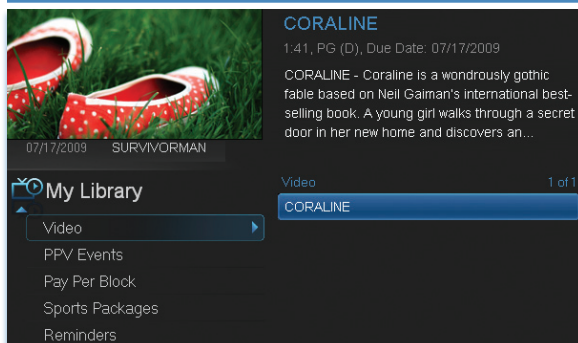

Step 1: Pick Your Video Rental

 Highlight your Video Rental and press **OK**.

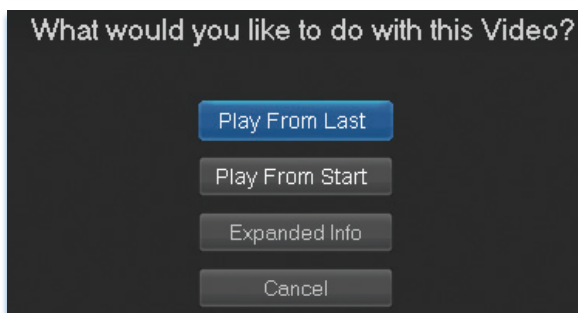

Step 2: Play Your Rental

 
Highlight **Play From Start** and press **OK** to start playing at the beginning.

If you have already watched part of the program and want to pick up where you left off, highlight **Play From Last** and press **OK**.

Introducing PPV Events

PPV Events allows you to view a previously purchased program.

Go To PPV, Pay Per Block, and Sports Package

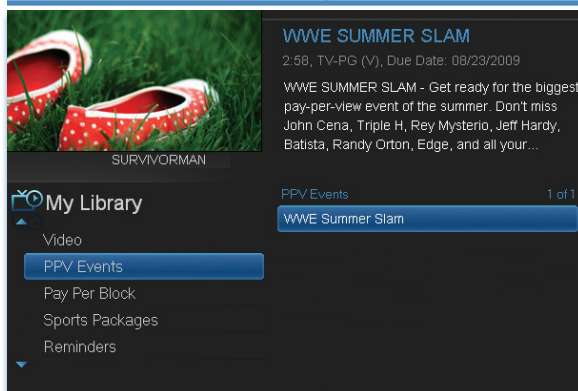

Arrow down to your topic and press **OK**. All purchased pay per view events are listed to the right. Highlight the event you want to watch and press **OK** for information and viewing options.



Introducing Reminders

 
Reminders lists all Reminder and Autotune events you have created. From here you can cancel a Reminder or Autotune.

Go To Reminders

Highlight **Reminders** and press **OK**.


A list of your Reminders  and Autotunes  appears to the right.

Cancel a Reminder or Autotune

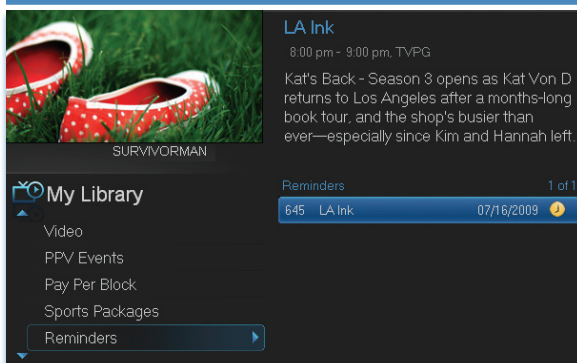

Step 1: Pick the Program

 Highlight the Reminder or Autotune you want to cancel and press **OK**.

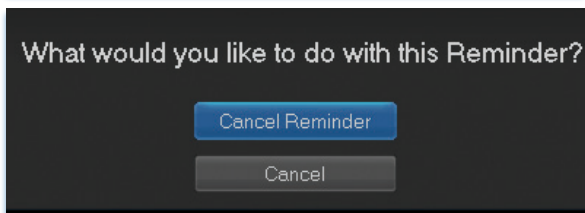

Step 2: Cancel the Autotune or Reminder

 
Highlight **Cancel Autotune** or **Cancel Reminder** depending on the type of event you are cancelling and press **OK**.



11 My Library

Introducing Messages

Messages may inform you of promotional offers, upcoming Video on Demand events, service upgrades or billing alerts.

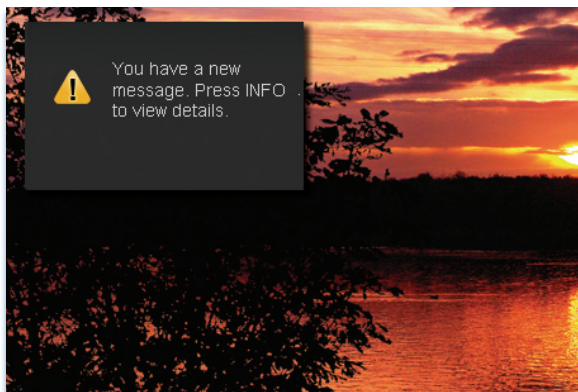


Whenever you receive a new message an alert will appear on your screen. Press **INFO** on your remote to display the message, or press **EXIT** to ignore the alert and view the message later.

Go To Messages

Highlight **Messages** and press **OK**.

A list of all available messages appears to the right.

 Reading a Message

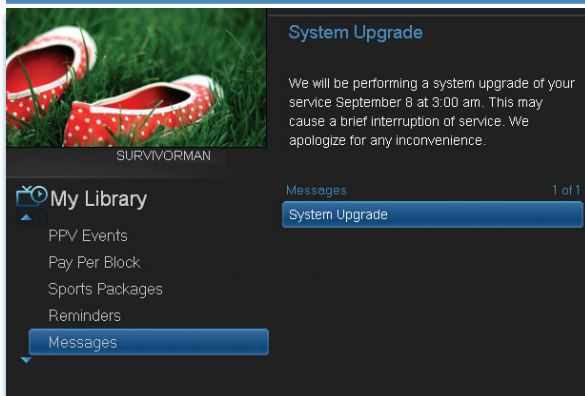

Highlight the message listing you want to read. The full message will be displayed in the Info Area in the upper right-hand corner of your screen.



Introducing Controls

 
Note: Parental Controls must first be set up in Settings before the Control On/Off icon will appear on the Menubar (For instructions see 13 Settings - Go to Parental Controls).

Parental Controls are available once you have enabled them in the **Settings** menu. They enable parents to selectively block programming by channel or rating.

Controls let you turn on and off the parental controls you have set. When the controls are on, the kids can watch TV without seeing an inappropriate program. When the controls are off, adults can watch their programs without repeatedly entering a password.

When the controls are on, even titles of programs that exceed your parental control settings will not be shown. Once the controls are turned off, all program titles will be shown.


Turning Controls On

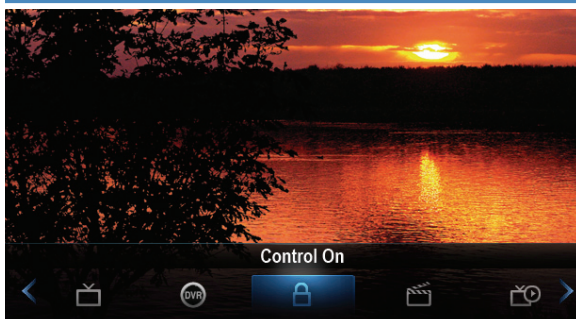

Press **MENU** and highlight the **Controls** icon. The Menu lets you know if the controls are on or off.

If parental controls are in effect, the icon will say **Control On**.

 Turning Controls Off

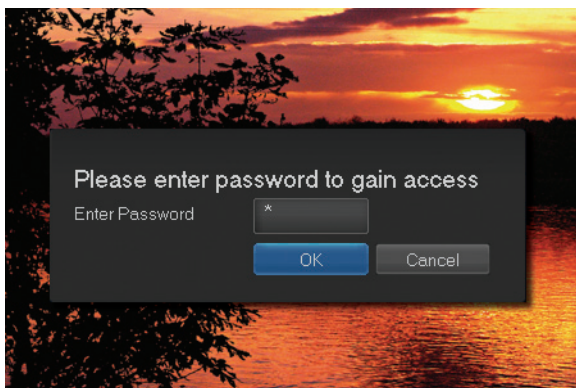


Highlight the **Control On** icon and Press **OK** to bring up the password screen. Use the **Number Pad** on your remote to enter your parental controls password. Then highlight **OK** and press **OK** on your remote.




12 Controls

 When you disable the controls, they will remain that way until you turn them back on, or the Parental Control Unlock Timeout is reached. The time out is the maximum period of time for which the parental controls will be disabled.

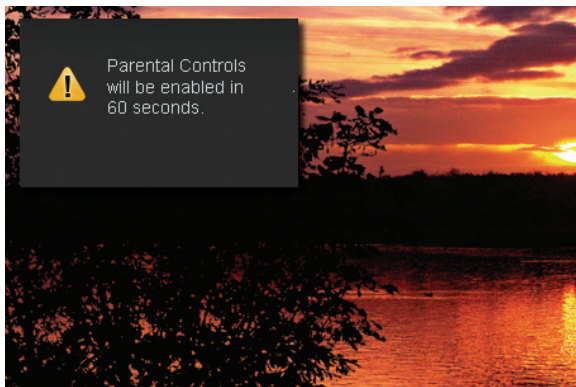

 At the end of the Parental Control Unlock Timeout, the system will automatically restore parental controls. You will see an alert on the screen just before parental controls are restored.

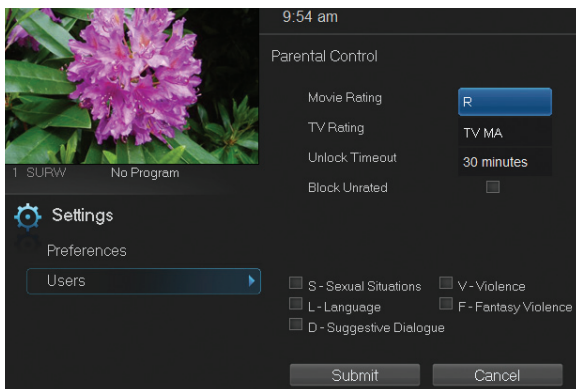

This Parental Control Unlock Timeout is located in **Settings** (see **13 Settings**).

In **Settings** click on **Users**, then **Parental Control**, then select the option **Unlock Time Out**, then select the amount of time.

This ensures your parental controls will remain in effect in case you watch an adult program and forget to turn the controls back on.

Turning Controls On Again

Press **MENU** and highlight **Control Off**, then press **OK**. The icon will change to **Control On**, and the parental controls are now in effect.



 
Introducing Settings

Settings gives you control over your video service. You can choose to share purchased programs, change how alerts appear on your screen, create parental controls and block programs by channel or ratings. You can also create accounts for members of your family.

Go To Settings


Press **MENU** and highlight **Settings**. Then enter your password, highlight **OK** and press **OK**. There are two main sections of **Settings: Preferences** and **Users**. Both are used for setting up parental controls.

Activating Parental Control

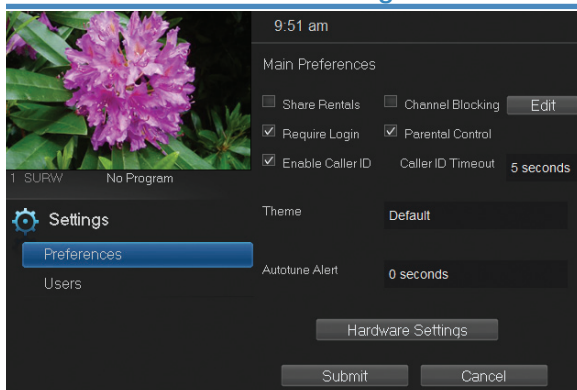

Arrow to **Parental Control** under **Main Preferences** and press **OK** to check the box. **Arrow** to **Submit** and press **OK**. You will be returned to live TV. Navigate back to **Settings** and enter your account password.

 Selecting Parental Control Settings.

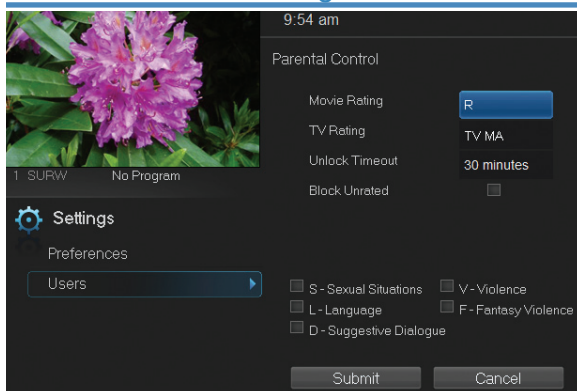

Arrow Down to **Users** and press **OK**. **Arrow Right** and highlight **Parental Control** and press **OK**.

A new screen appears listing the **Parental Control** topics.

Arrow Up and **Down** to check the controls you want to set for your household.

Movie and TV ratings determine the highest rating for programs that will be blocked.



13 Settings

Unlock Timeout (Only Available on Master Account)

Unlock Timeout determines how long parental controls will remain disabled.

Unlock Timeout

30 minutes

To set Unlock Timeout, highlight the option box next to **Unlock**

Timeout and press **OK**. Use the **Right/Left Arrow Keys** to select the amount of time wanted, then press **OK**. See **12 Controls - Turning Controls Off** for more details.

Block Unrated



Block Unrated (Only Available on Master Account)

Block Unrated allows or blocks any program that does not have a rating.

To turn Block Unrated on or off, highlight the check box and press **OK**.

- | | |
|--|---|
| <input type="checkbox"/> S - Sexual Situations | <input type="checkbox"/> V - Violence |
| <input type="checkbox"/> L - Language | <input type="checkbox"/> F - Fantasy Violence |
| <input type="checkbox"/> D - Suggestive Dialogue | |

Content Rating

To block a particular type of content, highlight the check box to the left of that item and press **OK**.

Activating the Parental Control Settings

Once you have finished your selections, **Arrow Down** to **Submit** and press **OK**. Now Parental Control will be available to turn off and on. See **12 Controls** for details.

Working With Additional Preferences

Share Rentals

Share Rentals makes purchased programs available for any user (enabled), or only available to the user who makes the purchase (disabled).



Share Rentals

To turn on or off, highlight the check box and press **OK**. Checked rentals will appear on purchase screens.

Require Login

Require Login determines if a user name and password must be entered before being able to use your TV service.



Require Login

To turn Require Login on or off, highlight the check box and press **OK**. This ensures that the additional users or sub accounts must log in to watch programs.

Enable Caller ID

Enable Caller ID turns on or off screen alerts for incoming Caller ID.



 
Enable Caller ID

To turn Enable Caller ID on or off, highlight the check box and press **OK**.



Caller ID Timeout

Caller ID Timeout determines how long Caller ID notifications remain on the screen.



To set Caller ID Timeout, highlight the option box to the right of **Caller ID Timeout** and press **OK**. Then press

the **Right or Left Arrow Key** to rotate to the amount of time you want the alert displayed, then press **OK**.

Channel Blocking

Channel Blocking enables or disables the list of channels you have blocked. Blocked channels do not appear in Guide.



To turn Channel Blocking on or off, highlight the check box and press **OK**.

 
To edit the list of channels that are blocked, highlight the **Edit** button and press **OK**.

Channel Blocking Edit displays a list of all channels available. You can then block or unblock any channel. Blocked channels WILL NOT APPEAR in channel lineup. This can be a Parental Control feature or a stand-alone.



To block channels, highlight the **Channel Blocking Edit** button and press **OK**.

If no changes have been made on the **Preferences** screen, you will go directly to the list of all available channels. If any changes *have* been made to the main **Preferences** screen and you have not already updated them, a **Save Changes** box will appear. Highlight **YES** and press **OK** if you wish to save these changes. The **Settings Successfully Updated** notice will then appear. Highlight **OK**, and press the **OK** button

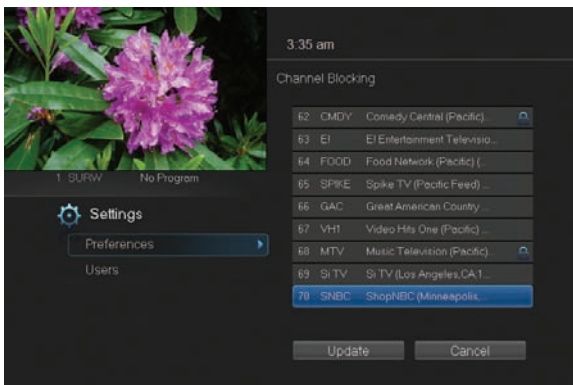

The **Channel Blocking** list will appear.

To block/unblock a channel, highlight the channel entry and press **OK**.

To go to the next screen of channels, press the **Up or Down Arrow Key**. When complete, **Arrow** to update and press **OK**.



13 Settings

Autotune Alert

Autotune Alert determines how early an Autotune will be shown once you set an Autotune.

Autotune Alert

0 seconds

To set Autotune Alert, highlight the option box to the right of **Autotune Alert** and press **OK**. Then press the **Right or Left Arrow Key** to display **0 seconds**, **30 seconds**, **2 minutes** or **5 minutes**, then press **OK**.

0 seconds will display your Autotune at the exact time the program begins. Any of the other settings will trigger the Autotune that many seconds or minutes before the program begins.

Theme

Theme

Default

 
For service provider use only.

Hardware Settings

Hardware Settings

For service provider use only.

Working With Settings/Users

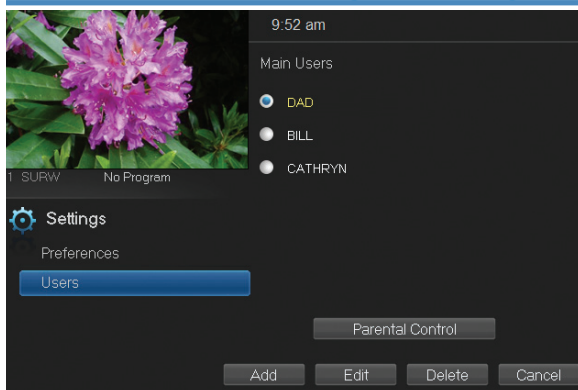

User accounts allows you to have separate parental controls, purchase limits and themes for different family members.

Users/Settings

allows you to add a user account, edit an existing user account, change parental controls for a user account, or delete a user account.

Note: The master account is the first account listed and is shown in yellow rather than white. You cannot delete the master account and cannot change the login name for the master account.

 
13 Settings




Adding a User Account



To create a new user account, highlight the **Add** button and press **OK**.

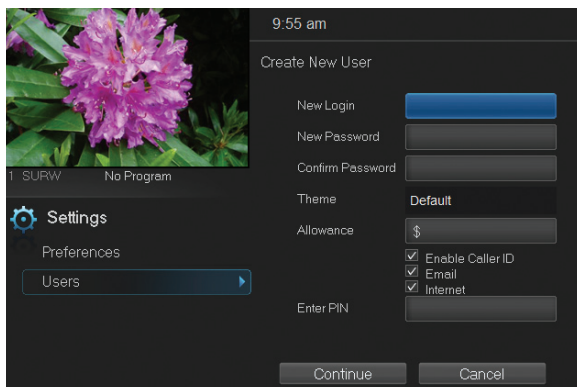

 Highlight **New Login** to enter the name for the new account and press **OK**. An on-screen keyboard appears.

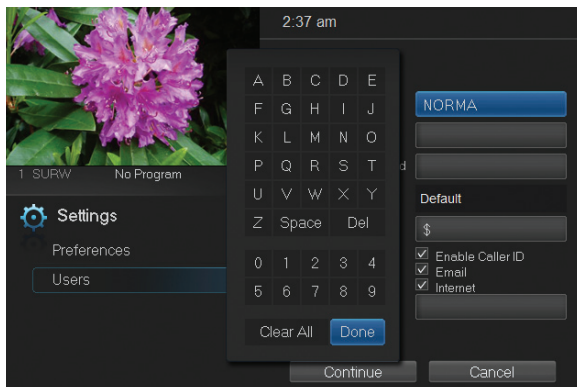

Use the **Arrow Keys** to highlight a letter or number and press **OK** to add it to the login name.

Once you have entered the desired name, highlight **Done** and press **OK** to return to the Create New User screen.



13 Settings

2:38 am

Create New User

New Login NORMA

New Password XXXX

Confirm Password XXXX

Theme Default

Allowance \$100

Enter PIN XXXXXX

☒ Enable Caller ID

☒ Email

☒ Internet

Continue Cancel

Highlight **New Password** to enter the password for the new account. Use the **Number Pad** on your remote to enter the password.

CATHRYN

Highlight **Confirm Password** to re-enter the password for the new account. Use the **Number Pad** on your remote to re-enter the password.

Theme

Theme Default

For service provider use only.

Allowance \$100

Highlight **Allowance \$** to enter a limit to the amount of programs that can be purchased per month for the new account. Use the **Number Pad** on your remote to enter a whole dollar amount (e.g. 200 to limit the account to \$200.00).

☒ Enable Caller ID

 
Highlight the **Enable Caller ID** check box and press **OK** to enable or disable Caller ID alerts to appear on the screen for this user account.

Enter PIN XXXXXX

Highlight **Enter PIN** to enter the master account's PIN as a further way of verifying the master account holder is creating this account. Use the **Number Pad** on your remote to enter the PIN.

Now highlight **Continue** and press **OK** to go to the next Add User Account screen.

13 Settings

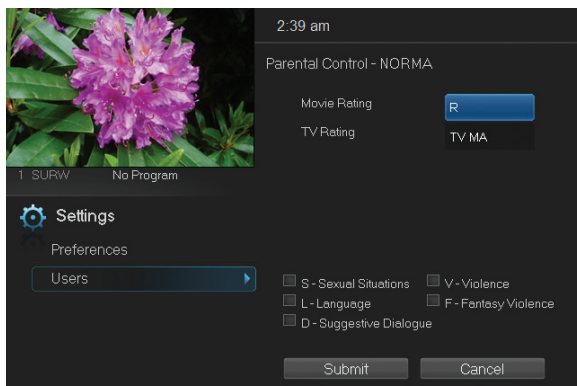


The second Add User Account screen allows you to create parental controls specific to this user.

These parental control settings are identical to the settings shown earlier with the exception that there is no Unlock Timeout or Block Unrated setting.


Once you have entered the settings for the new account, highlight **Submit** and press **OK**.

 Editing a User Account

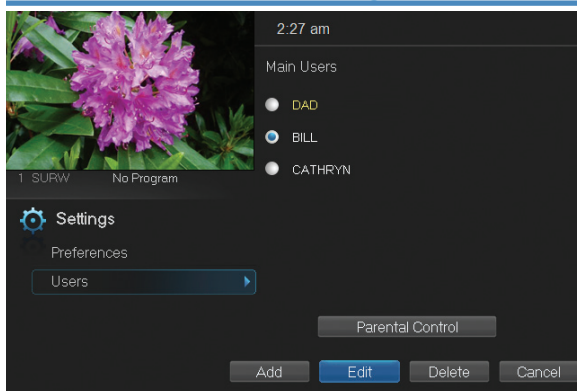

To edit a user account, highlight the user account and press **OK**, then highlight the **Edit** button and press **OK**.

 Note: The master account is the first account listed and is shown in yellow rather than white.

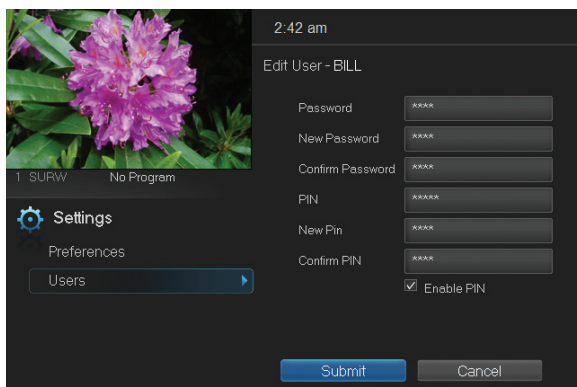

Using the **Number Pad** on your remote, enter the current password for this account.



13 Settings

Confirm Password	*****
------------------	-------

Now highlight **New Password** to change the password. Use the

Number Pad on your remote to enter a numeric password.

Confirm Password	*****
------------------	-------

Highlight **Confirm Password** to re-enter the password. Use the **Number Pad**

on your remote to exactly re-enter the password.

PIN	*****
-----	-------

Highlight **PIN** and enter the account's existing PIN.

New Pin	*****
---------	-------

Highlight **New PIN** and enter a new PIN for this account.

Confirm PIN	*****
-------------	-------

Highlight **Confirm PIN** to re-enter the new PIN.

<input checked="" type="checkbox"/> Enable PIN
--

Highlight the **Enable PIN** check box and press **OK** to enable or disable the need to use a PIN.

 
Once you have made all changes to this account, highlight **Submit** and press **OK**.



Sign Out / Sign In

This function is typically only used if there are more than one user account, usually when a parent adds a child as a new user. The parent's account (master account) controls the child's account (sub account).

Go To Sign Out / Sign In

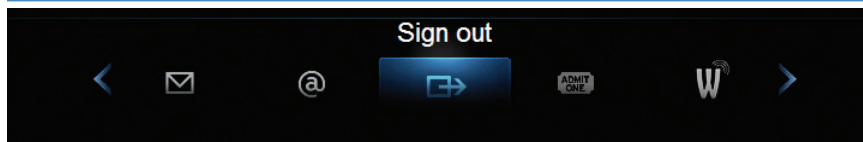

Press the **MENU** button on the remote. Scroll the menubar to the **Sign Out** icon and click **OK**.

You will then be signed out of your account, and the **Sign In** screen will appear. Highlight the **Name** entry box and press **OK**.

Use the **Up/Down Arrows Keys** to select the name for the desired account. Then highlight the **Password** entry box and enter the password used for the desired account, highlight **Sign In** and press **OK**.

When a new user signs in, parental controls and other set restrictions for that account will be imposed.



15 Favorites

Introducing Favorites

Save time and enjoy the channels you watch the most. Each Favorites list contains just the TV channels you wish to view. You can create multiple Favorites lists and quickly change the Guide to show them.

Go To Favorites

Press **MENU** and highlight **Favorites**, then press **OK**.

A screen will appear with options to choose, edit, create or delete a list, or cancel.


Choosing a Favorites List

There are two ways to choose a favorites list:


Option 1: Favorites From the Menubar

Follow the steps above in “Go To Favorites,” then highlight **Choose** and press **OK**. Then highlight the favorites list you want and press **OK**.

 Option 2: Favorites From Guide

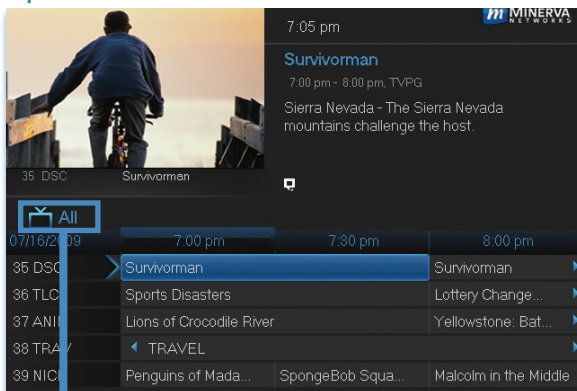

 While in Guide, you can cycle through your Favorites lists by pressing **GUIDE** repeatedly. Each press will activate the next Favorites list. Cycling to **All** will display all available programming.

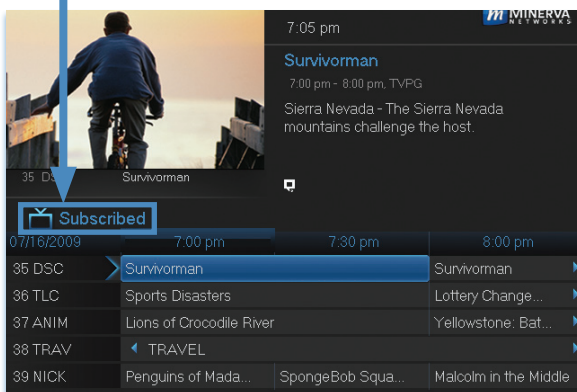

The name of the active Favorites list is shown below the picture-in-picture area. This causes Guide to only display the channels included on that Favorites list.

Pressing **GUIDE** once you have cycled through all Favorites lists will exit Guide.

 


Creating or Editing a Favorites List

Step 1: Create or Edit

Follow the steps in “Go To Favorites,” highlight **Create** or **Edit**, and press **OK** to bring up the Favorites create/edit screen. This screen displays every channel offered.

Step 2: Name Your Favorites List

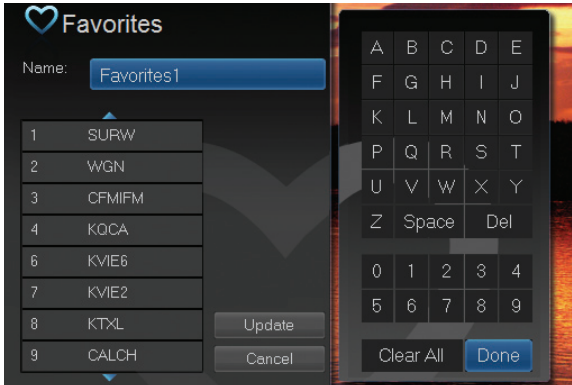


The **Name:** box is already highlighted. Press **OK** to use the on-screen keyboard to change the name for your favorites list.

First, highlight **Clear All** and press **OK** to clear the default name.

Highlight each letter in the new name and press **OK**. Once you have entered the name, highlight **Done** and press **OK**.

Step 3: Choose Your Favorite Channels

Arrow Up and **Down** and select the channels to add or remove from your favorites list and press **OK**. A channel included in the favorites list shows a heart icon  to the right of the channel info.

To save your favorites list, **Arrow Right** and highlight **Update** and press **OK**.

To cancel your favorite list without saving it, highlight the **Cancel** button at the bottom right of your screen and press **OK**.

Delete a Favorites List

Step 1: Select Delete

Follow the steps in “Go To Favorites,” then highlight **Delete** and press **OK**.

Step 2: Select the Favorites List to Delete

Highlight the favorites list you want to delete and press **OK**. A box will appear asking you to confirm that you want to delete the selected favorites list. Highlight Yes to delete or No to Cancel, and press **OK**.



16 Search

Introducing Search

 
Search allows you to enter the name or partial name of a program or video you are looking for and have your service find any program matching the text you enter.

Go To Search


Press **MENU** and highlight **Search**, then press **OK**.

Search For A Program

Step 1: Enter The Program Title

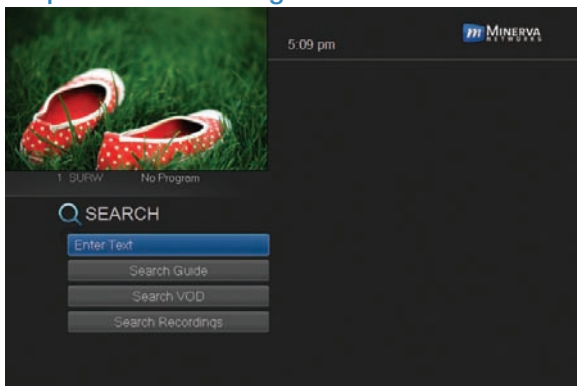

 The highlight will be on the **Search** text box when the Search screen appears.

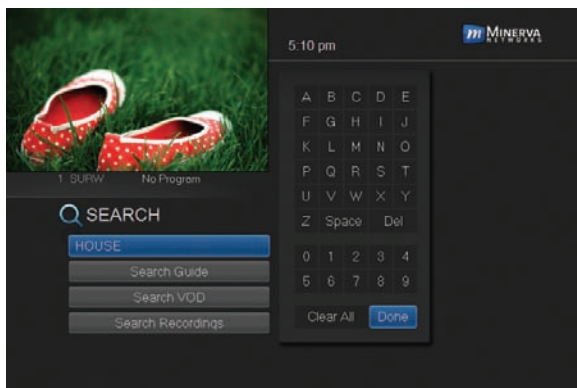


Press **OK** and a keyboard will appear to the right of the screen.

Highlight each letter in the name of the program you want to find, and press **OK** on each. Each time you press **OK** you will see that letter added to the text box.

If you enter a wrong letter, highlight **Del** and press **OK** to go back one space.


If you need to start over, highlight **Clear All** and press **OK**.

 Once you have entered as much of the program name as you feel necessary, highlight **Done** and press **OK**.




Note: It is best to enter as little as possible when searching. Usually the first 3 or 4 letters in the name will be enough to find what you want.

 Step 2: Search

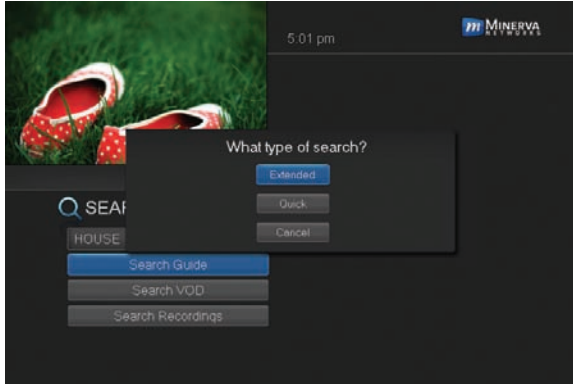

Highlight **Search Guide** and press **OK** to have the system start searching for all programs that match your search criteria.

 Step 3: Pick A Result

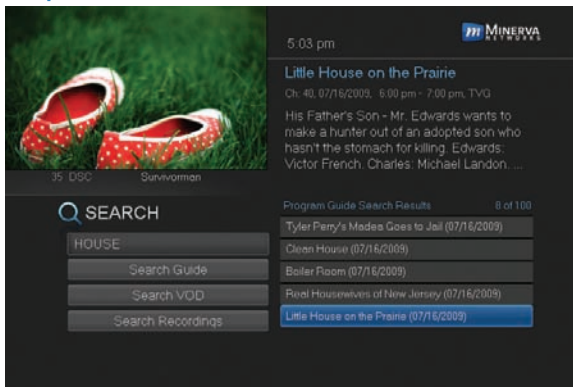

You can now highlight any program or rental listing and press **OK** to...

Watch or record a program if it's on now.

Set a reminder, auto tune or recording for a program if it comes on later.

You cannot set a reminder, auto tune or recording for purchased programs.

Set Top Box

 
Amino 125 Set Top Box



1. **5V DC** Provides power to the set top box.
2. **Network** Connects the set top box to the video service using a CAT5 Ethernet cable.
3. **USB** (Universal Serial Bus) Connects the set top box to technician's equipment and other devices.
4. **SPDIF Digital Out** Connects the set top box to a home theater system to provide surround sound audio - provides audio only.
5. **Audio Visual Out** (Composite Video and Stereo Audio) Connects the set top box to your TV or VCR to provide good quality video and stereo audio - custom Amino cable has 10-pin connector at set top box end and yellow, red and white RCA connectors at TV/VCR end.
6. **Out** Connects the set top box to the TV using a standard coax cable - provides video and audio.
7. **In** Connects the set top box to the video service using a standard coax cable - provides audio and video.

Set Top Box


ADB 2500 Set Top Box

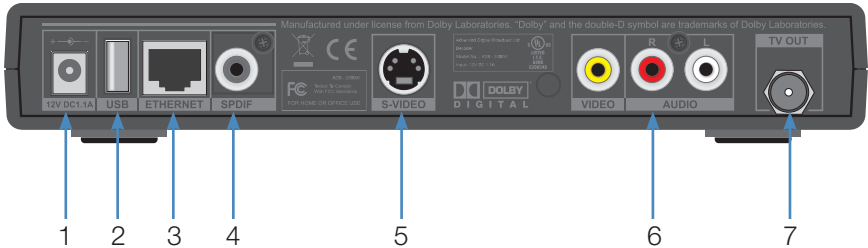

1. **Power 12V DC 1.1A** Provides power to the set top box.
2. **USB** (Universal Serial Bus) Connects the set top box to technician's equipment and other devices.
3. **Ethernet** Connects the set top box to the video service using a CAT5 Ethernet cable.
4. **SPDIF** Connects the set top box to a home theater system to provide surround sound audio - provides audio only.
5. **S-Video** Connects the set top box to your TV to provide high-quality video - provides video only.
6. **Video/Stereo Audio R/L** (Video/Audio Left/Audio Right) Connects the set top box to your TV or VCR to provide good quality video and stereo audio.
7. **TV Out** Connects the set top box to your TV using a standard coax cable - provides audio and video.

Set Top Box

 
ADB 5721 WNX Set Top Box

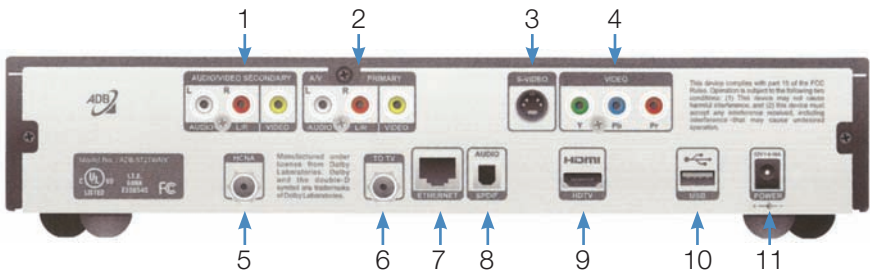

1. **Secondary Video/Stereo Audio R/L** (Video/Audio Left/Audio Right)
Connects the set top box to your TV or VCR to provide good quality video and stereo audio.
2. **Primary Video/Stereo Audio R/L** (Video/Audio Left/Audio Right)
Connects the set top box to your TV or VCR to provide good quality video and stereo audio.
3. **S-Video** Connects the set top box to your TV to provide high-quality video - provides video only.
4. **Component (HD Analog) Output** (Video/Audio Left/Audio Right)
Connects the set top box to your TV or VCR to provide high definition quality video and stereo audio.
5. **HCNA Coax Port** Connects the set top box to a HCNA wall socket using coax wiring.
6. **RF Modulated Output to TV** Connects the set top box to your TV using a standard coax cable - provides audio and video.
7. **Ethernet** Connects the set top box to the video service using a CAT5 Ethernet cable.
8. **S/PDIF** Connects the set top box to a home theater system to provide surround sound audio - provides audio only.
9. **HDMI** (High Definition Media Interface) Connects the set top box to your HDTV using an HDMI cable - provides audio and video.
10. **USB** (Universal Serial Bus) Connects the set top box to technician's equipment and other devices.
11. **Power Adapter** Provides power to the set top box

Set Top Box

 ADB 5810 Set Top Box

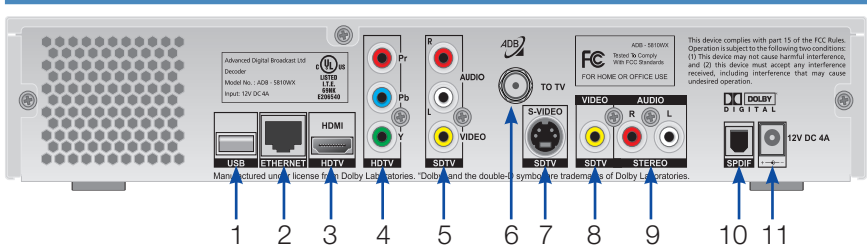

1. **USB** Connects the set top box to USB compatible devices.
2. **Ethernet** Connects the set top box to the video service using a CAT5 Ethernet cable.
3. **HDMI** (High Definition Media Interface) Connects the set top box to your HDTV using an HDMI cable - provides audio and video.
4. **Pr/Pb/Y** (Component Video) Connects the set top box to your TV to provide very high-quality video - provides video only.
5. **VCR Audio Right/Audio Left/Video** Connects the set top box to your VCR to provide good quality stereo audio and video.
6. **To TV** Connects the set top box to your TV using a standard coax cable - provides audio and video.
7. **S-Video** Connects the set top box to your TV to provide high-quality video - provides video only.
8. **TV Video** Connects the set top box to your TV to provide good quality video.
9. **TV Audio R/L** (Audio Left/Right) Connects the set top box to your TV to provide good quality stereo audio.
10. **S/PDIF** Connects the set top box to a home theater system to provide surround sound audio - provides audio only.
11. **12V DC 4A** Provides power to the set top box.



You can also use the front panel buttons of the ADB 5810 set top box to replace the basic remote control functions. Use **MENU** to display the Main Menu, **EPG** to display Guide, **RES** to change screen resolutions, and the **arrow** and **OK** buttons as you would those on the remote control.

 
Movie Ratings

MPAA (Motion Picture Association of America) Ratings System




G – General Audience

This is a film which contains nothing which would, in the view of the MPAA Rating Board, be offensive to parents whose younger children view the film.




PG – Parental Guidance Suggested

 The theme of a PG-rated film may itself call for parental guidance. There may be some profanity in these films. There may be some violence or brief nudity. But these elements are not deemed so intense as to require that parents be strongly cautioned beyond the suggestion of parental guidance. There is no drug use content in a PG-rated film.



PG-13 – Parents Strongly Cautioned

 A PG-13 film is one which, in the view of the MPAA Rating Board, leaps beyond the boundaries of the PG rating in theme, violence, nudity, sensuality, language, or other contents, but does not quite fit within the restricted R category. Any drug use content will initially require at least a PG-13 rating.



R – Restricted

An R-rated film may include hard language, or tough violence, or nudity within sensual scenes, or drug abuse or other elements, or a combination of some of the above, so that parents are counseled to take this advisory rating very seriously.



NC-17 – No Children 17 or Under

NC-17 does not necessarily mean “obscene or pornographic” in the often accepted or legal meaning of those words. The MPAA Review Board does not and cannot mark films with those words. These are legal terms and for courts to decide. The reasons for the application of an NC-17 rating can be violence or sex or aberrational behavior or drug abuse or any other elements which, when present, most parents would consider too strong and therefore off-limits for viewing by their children.

TV Ratings

TV Parental Guidelines Ratings System

The TV Parental Guidelines ratings provides program ratings, and content ratings to provide a clearer idea of the reason for a program's rating

Program Ratings



TV-Y – All Children

This program is designed to be appropriate for all children.



TV-Y7 – Directed to Older Children

This program is designed for children age 7 and above. It may include mild fantasy violence or comedic violence.



TV-G – General Audience

Most parents would find this program suitable for all ages.



TV-PG – Parental Guidance Suggested

This program contains material that parents may find unsuitable for younger children.



TV-14 – Parents Strongly Cautioned

This program contains some material that many parents would find unsuitable for children under 14 years of age.



TV-MA – TV Mature Audience Only

This program is specifically designed to be viewed by adults and therefore may be unsuitable for children under 17.

Content Ratings

Content Ratings are shown just below the program rating.



FV: Fantasy Violence (only applied to TV-Y7)

For those programs where fantasy violence may be more intense or more combative than other programs in this category.

The meaning of a content rating increases as the program rating increases.

V: Violence	TV-PG: Moderate; TV-14: Intense; TV-MA: Graphic
S: Sexuality	TV-PG: Some; TV-14: Intense; TV-MA: Explicit
L: Language	TV-PG: Infrequent; TV-14: Strong; TV-MA: Crude
D: Dialogue	TV-PG: Some; TV-14: Intense; TV-MA: Not used

  For more information on TV Parental Guidelines Monitoring Board and its rating system, please visit www.tvguidelines.org.

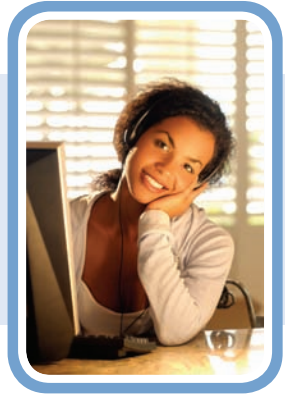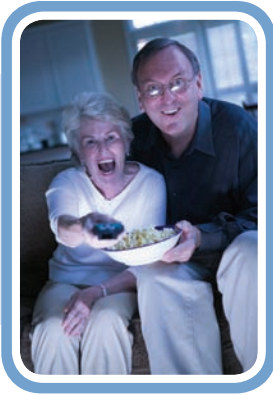

Clarksville Department of Energy
2021 Wilma Rudolph Blvd
Clarksville, TN 37040
Phone (931) 648-8151
www.clarksvilledo.com